

# Troubleshooting & Solutions Guide



**MRCOOL®**

COMFORT MADE SIMPLE

## 4th Generation DIY® Multi-Zone

Due to updates and constantly improving performance, the information and instructions within this manual are subject to change without notice. Please visit [www.mrcool.com/documentation](http://www.mrcool.com/documentation) to ensure you have the latest version of this manual.

Version Date: 10-22-21

# Troubleshooting

## Contents

|           |   |           |
|-----------|---|-----------|
| <b>1.</b> | <b>Safety Caution .....</b>   | <b>3</b>  |
| <b>2.</b> | <b>General Troubleshooting.....</b>   | <b>4</b>  |
| 2.1       | Error Display (Indoor Unit).....  | 4         |
| 2.2       | Error Display (Outdoor Unit).....   | 6         |
| <b>3.</b> | <b>Complain Record Form.....</b>  | <b>7</b>  |
| <b>4.</b> | <b>Information Inquiry .....</b>  | <b>9</b>  |
| <b>5.</b> | <b>Outdoor Unit Point Check Function.....</b>   | <b>12</b> |
| <b>6.</b> | <b>Error Diagnosis and Troubleshooting Without Error Code.....</b>  | <b>18</b> |
| 6.1       | Remote maintenance.....   | 18        |
| 6.2       | Field maintenance.....  | 19        |
| <b>7.</b> | <b>Quick Maintenance by Error Code.....</b>   | <b>24</b> |
| <b>8.</b> | <b>Troubleshooting by Error Code.....</b>   | <b>27</b> |
| 8.1       | EH 00 /EC 51(EEPROM parameter error diagnosis and solution).....  | 27        |
| 8.2       | EL 01 (Indoor and outdoor units communication error diag. and solution)....   | 28        |
| 8.3       | EH 03 / EC 07 (Fan speed is operating outside of the normal range)/<br>EC 71 (Overcurrent Failure of Outdoor DC Fan Motor) Diag. and Solution...31  |           |
| 8.4       | EH 60/EH 61/EC 53/EC 52/EC 54/EC 56 /(ODU)E4/EC 50 (Open circuit or<br>short circuit of temperature sensor diagnosis and solution).....   | 33        |
| 8.5       | PC 08(Current overload protection)/PC 44(Outdoor unit zero speed protection)/<br>PC 46(Compressor speed has been out of control)/PC 49(Compressor<br>overcurrent failure) diagnosis and solution..... | 34        |
| 8.6       | PC 00 (IPM malfunction) & (IDU) PC 04 (Inverter compressor drive error<br>diagnosis and solution).....  | 36        |

# Troubleshooting

## Contents

|           |  |           |
|-----------|--|-----------|
| 8.7       | PC 01(Over voltage or too low voltage protection)/PC 10(Outdoor unit low AC voltage protection)/PC 11(Outdoor unit main control board DC bus high voltage protection)/PC 12(Outdoor unit main control board DC bus high voltage protection /341 MCE error) Diagnosis and Solution..... | 38        |
| 8.8       | PC40(Communication malfunction between IPM board and outdoor main board diagnosis and solution).....   | 40        |
| 8.9       | (ODU)PC 0F(PFC module protection diagnosis and solution).....  | 41        |
| 8.10      | (ODU)PC 06(Temperature protection of compressor discharge diagnosis and solution).....   | 42        |
| 8.11      | (ODU)PC 0A(High temperature protection of condenser diagnosis and solution).....   | 43        |
| 8.12      | EH 02 (Zero crossing detection error diagnosis and solution).....  | 45        |
| 8.13      | PC 02/(ODU)P0 (Top temperature protection of compressor diagnosis and solution).....   | 46        |
| 8.14      | (IDU)PC 03/(ODU)PC 30 (High pressure protection diag. and solution)....  | 47        |
| 8.15      | (IDU)PC 03/(ODU)PC 31 (Low pressure protection diag. and solution)....   | 49        |
| 8.16      | EC 72 (Lack phase failure of outdoor DC fan motor diag. and solution)....  | 51        |
| 8.17      | PC 43 (Outdoor compressor lack phase protection diag. and solution)....  | 52        |
| 8.18      | PC 45 (Outdoor unit IR chip drive failure diagnosis and solution).....   | 53        |
| 8.19      | (ODU)CE (Automatic correction of wiring/piping error) diag. and solution)  | 53        |
| <b>9.</b> | <b>Check Procedures.....</b>   | <b>54</b> |

## 1. Safety Caution


### **!** WARNING

Be sure to turn off all power supplies or disconnect all wires to avoid electric shock. While checking indoor/outdoor PCB, please equip oneself with anti-static gloves or wrist strap to avoid damage to the board.

### **!** WARNING

Electricity remains in capacitors even when the power supply is off. Ensure the capacitors are fully discharged before troubleshooting.

Test the voltage between P and N on back of the main PCB with multimeter. If the voltage is lower than 36V, the capacitors are fully discharged.

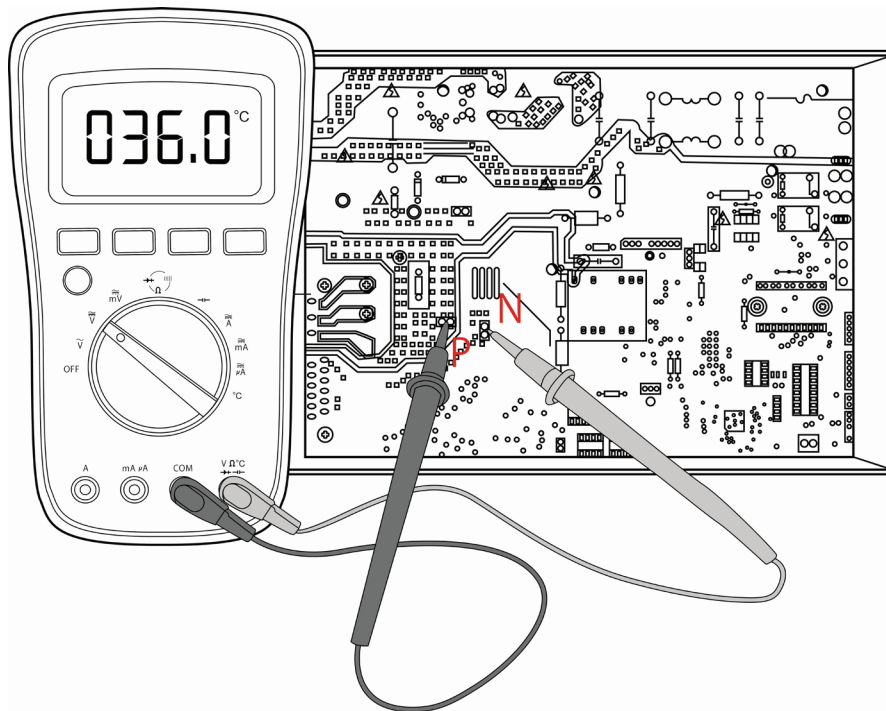

Note: This picture is for reference only. Actual appearance may vary.

## 2. General Troubleshooting

### 2.1 Error Display (Indoor Unit)

When the indoor unit encounters a recognized error on different models,

1. the running LED with flash in a corresponding series, the timer LED may turn on or begin flashing;
2. an error code will be displayed;
3. both 1 and 2.

These error codes are described in the following tables:

| Running Lamp | Timer Lamp | Display      | Information   | Solution                      |
|--------------|------------|--------------|---|-------------------------------|
| --           | --         | <b>dF</b>    | Defrost   | Normal Display not error code |
| --           | --         | <b>CL</b>    | Filter cleaning reminder (power on display for 15 seconds)  |                               |
| --           | --         | <b>CL</b>    | Active clean  |                               |
| --           | --         | <b>nF</b>    | Filter replacement reminder (power on display for 15 seconds)   |                               |
| --           | --         | <b>FP</b>    | Heating in room temperature under 8°C   |                               |
| --           | --         | <b>FC</b>    | Forced cooling  |                               |
| --           | --         | <b>AP</b>    | AP mode of WIFI connection  |                               |
| --           | --         | <b>CP</b>    | Remote switched off   |                               |
| 1 time       | OFF        | <b>EH 00</b> | Indoor unit EEPROM parameter error  | TS27                          |
| 2 times      | OFF        | <b>EL 01</b> | Indoor/outdoor units communication error  | TS28                          |
| 3 times      | OFF        | <b>EH 02</b> | Zero-crossing signal detection error (for some models)  | TS45                          |
| 4 times      | OFF        | <b>EH 03</b> | The indoor fan speed is operating outside of the normal range   | TS31                          |
| 5 times      | OFF        | <b>EC 51</b> | Outdoor unit EEPROM parameter error   | TS27                          |
| 5 times      | OFF        | <b>EC 52</b> | Condenser coil temperature sensor T3 is in open circuit or has short-circuited  | TS33                          |
| 5 times      | OFF        | <b>EC 53</b> | Outdoor room temperature sensor T4 is in open circuit or has short circuited  | TS33                          |
| 5 times      | OFF        | <b>EC 54</b> | Compressor discharge temperature sensor TP is in open circuit or has short circuited                                  | TS33                          |
| 5 times      | OFF        | <b>EC 56</b> | Evaporator coil outlet temperature sensor T2B is in open circuit or has short circuited (for free-match indoor units) | TS33                          |
| 6 times      | OFF        | <b>EH 60</b> | Indoor room temperature sensor T1 is in open circuit or has short circuited   | TS33                          |
| 6 times      | OFF        | <b>EH 61</b> | Evaporator coil middle temperature sensor T2 is in open circuit or has short circuited                                | TS33                          |
| 12 times     | OFF        | <b>EC 07</b> | The outdoor fan speed is operating outside of the normal range  | TS31                          |
| 7 times      | FLASH      | <b>PC 00</b> | IPM malfunction or IGBT over-strong current protection  | TS36                          |
| 2 times      | FLASH      | <b>PC 01</b> | Over voltage or over low voltage protection   | TS38                          |
| 3 times      | FLASH      | <b>PC 02</b> | Top temperature protection of compressor or High temperature protection of IPM module or High pressure protection     | TS46                          |
| 5 times      | FLASH      | <b>PC 04</b> | Inverter compressor drive error   | TS36                          |
| 1 time       | FLASH      | <b>PC 08</b> | Current overload protection   | TS34                          |
| 7 times      | FLASH      | <b>PC 03</b> | High pressure protection or low pressure protection   | TS47/TS49                     |
| 1 times      | ON         | --           | Indoor units mode conflict (match with multi outdoor unit)  | --                            |

---


**For other errors:**

The display board may show a garbled code or a code undefined by the service manual. Ensure that this code is not a temperature reading.

**Troubleshooting:**

Test the unit using the remote control. If the unit does not respond to the remote, the indoor PCB requires replacement. If the unit responds, the display board requires replacement.

**88 flash frequency:**

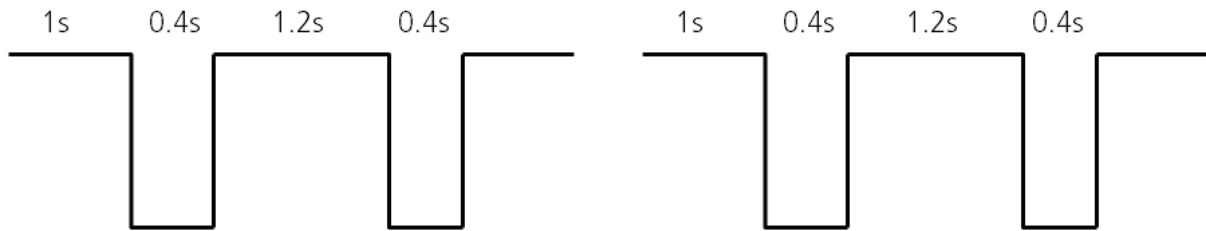

## 2.2 Error Display (Outdoor unit)

| Display | Malfunction or Protection   | Solution                          |
|---------|---|-----------------------------------|
| df      | Defrosting  | Normal Display, not an error code |
| FC      | Forced cooling  |                                   |
| EC 51   | Outdoor EEPROM malfunction  | TS27                              |
| EL 01   | Indoor / outdoor units communication error  | TS28                              |
| PC 40   | Communication malfunction between IPM board and outdoor main board                      | TS40                              |
| PC 08   | Outdoor overcurrent protection  | TS34                              |
| PC 10   | Outdoor unit low AC voltage protection  | TS38                              |
| PC 11   | Outdoor unit main control board DC bus high voltage protection                          | TS38                              |
| PC 12   | Outdoor unit main control board DC bus high voltage protection /341 MCE error           | TS38                              |
| PC 00   | IPM module protection   | TS36                              |
| PC 0F   | PFC module protection   | TS41                              |
| EC 71   | Over current failure of outdoor DC fan motor  | TS31                              |
| EC 72   | Lack phase failure of outdoor DC fan motor  | TS51                              |
| EC 07   | Outdoor fan speed has been out of control   | TS31                              |
| PC 43   | Outdoor compressor lack phase protection  | TS52                              |
| PC 44   | Outdoor unit zero speed protection  | TS34                              |
| PC 45   | Outdoor unit IR chip drive failure  | TS53                              |
| PC 46   | Compressor speed has been out of control  | TS34                              |
| PC 49   | Compressor overcurrent failure  | TS34                              |
| PC 30   | High pressure protection  | TS47                              |
| PC 31   | Low pressure protection   | TS49                              |
| PC 0A   | High temperature protection of condenser  | TS43                              |
| PC 06   | Temperature protection of compressor discharge  | TS42                              |
| PC 02   | Top temperature protection of compressor  | TS46                              |
| EC 52   | Condenser coil temperature sensor T3 is in open circuit or has short circuited          | TS33                              |
| EC 53   | Outdoor room temperature sensor T4 is in open circuit or has short circuited            | TS33                              |
| EC 54   | Compressor discharge temperature sensor TP is in open circuit or has short circuited    | TS33                              |
| EC 56   | Evaporator coil outlet temperature sensor T2B is in open circuit or has short circuited | TS33                              |
| EC 50   | Open or short circuit of outdoor unit temperature sensor(T3,T4.TP)                      | TS33                              |
| LC 06   | IPM module frequency limit shutdown/IPM high temperature protection                     | --                                |
| PC 0L   | Low ambient temperature protection  | --                                |

### 3. Complain Record Form

#### Complain Record Form

Request No:

Date:

Installation Date:

Service Date:

| Customer Information                            |  |  |  |
|---|--|--|--|
| Name  |  | Telephone No.                                    |  |
| Home Address                                    |  |  |  |
| Email   |  |  |  |
| Product Information                             |  |  |  |
| Indoor Unit Model                               |  | Outdoor Unit Model                               |  |
| Serial No. of indoor unit                       |  |  |  |
| Serial No. of outdoor unit                      |  |  |  |
| Working Mode                                    | <input type="checkbox"/> Cooling <input type="checkbox"/> Heating <input type="checkbox"/> Fan only <input type="checkbox"/> Dry |  |  |
| Setting temperature                             | _____°C / °F   | Fan speed  | <input type="checkbox"/> Turbo <input type="checkbox"/> High <input type="checkbox"/> Medium<br><input type="checkbox"/> Low <input type="checkbox"/> Auto |
| Temperature of air inlet                        | _____°C / °F   | Temperature of air outlet                        | _____°C / °F   |
| Installation / Condition Information            |  |  |  |
| Indoor temperature                              | _____°C / °F   | Indoor humidity                                  | _____ %RH  |
| Outdoor temperature                             | _____°C / °F   | Outdoor humidity                                 | _____ %RH  |
| Length of Connecting pipe                       |  | Pipe diameter                                    | Gas pipe:      Liquid pipe   |
| Length of Wiring                                |  | wire diameter                                    |  |
| System Running Pressure                         | _____MPa   or   _____Bar   or   _____PSI   |  |  |
| Room size (L*W*H)                               |  |  |  |
| Photo of Installation of Indoor unit (Photo #1) |  | Photo of Installation of Outdoor unit (Photo #2) |  |
| Failure Description                             |  |  |  |
| Error Code of Indoor unit                       |  | Code of Outdoor PCB                              |  |
| Unit does not start                             |  |  |  |
| Remote control does not work                    |  |  |  |
| Indoor display shows nothing                    |  |  |  |
| No cooling or heating at all                    |  |  |  |
| Less cooling or heating                         |  |  |  |
| Unit starts but stops shortly                   |  |  |  |
| High noise                                      |  |  |  |
| High vibration                                  |  |  |  |
|   |  |  |  |



| Parameter Checking information by Remote controller            |                                    |               |                       |
|--|------------------------------------|---------------|-----------------------|
| Displaying code  | Displaying code meaning            | Display value | Display value meaning |
| T1   | Room temperature                   |               |                       |
| T2   | Indoor coil temperature            |               |                       |
| T3   | Outdoor coil temperature           |               |                       |
| T4   | Ambient temperature                |               |                       |
| Tb   | Outlet temperature of indoor coil  |               |                       |
| TP   | Discharge temperature              |               |                       |
| TH   | Suction temperature                |               |                       |
| FT   | Targeted Frequency                 |               |                       |
| Fr   | Actual Frequency                   |               |                       |
| IF   | Indoor fan speed                   |               |                       |
| OF   | Outdoor fan speed                  |               |                       |
| LA   | EXV opening steps                  |               |                       |
| CT   | Compressor continuous running time |               |                       |
| ST   | Causes of compressor stop.         |               |                       |
| A0, A1, b0, b1, b2, b3, b4, b5, b6, dL, Ac, Uo, Td, dA, dS, dT | Reserved                           |               |                       |

| Approval from Manufacturer                 |  |
|--|--|
| <input type="checkbox"/> Approved          |  |
| <input type="checkbox"/> More Proof needed |  |
| <input type="checkbox"/> Rejected          |  |

---

## 4. Information Inquiry

- To enter information inquiry status, complete the following procedure within 10 seconds:
  - Press LED 3 times.
  - Press SWING 3 times.
- Finish 1 and 2 within 10 seconds, you will hear beeps for two seconds, which means the unit goes into parameter checking mode.
- Use the LED (or DO NOT DISTURB) and SWING (or AIR DIRECTION) buttons to cycle through information displayed.
- Pressing LED (or DO NOT DISTURB) displays the next code in the sequence. Pressing SWING (or AIR DIRECTION) will show the previous.
- The following table shows information codes. The screen displays this code for 1.2 seconds, then the information for 25 seconds.

| Displayed code | Explanation                        | Displayed value   | Meaning   | Additional Notes  |
|----------------|------------------------------------|---|---|---|
| <b>T1</b>      | Room temperature                   | -1F,-1E,-1d,-1c,-1b,-1A<br>-19—99<br>A0,A1,...A9<br>b0,b1,...b9<br>c0,c1,...c9<br>d0,d1,...d9<br>E0,E1,...E9<br>F0,F1,...F9 | -25,-24,-23,-22,-21,-20<br>-19—99<br>100,101,...109<br>110,111,...119<br>120,121,...129<br>130,131,...139<br>140,141,...149<br>150,151,...159 | <ol style="list-style-type: none"> <li>All displayed temperatures use actual values.</li> <li>All temperatures are displayed in °C regardless of remote used.</li> <li>T1, T2, T3, T4, and T2B display ranges from -25 to 70 °C. TP display ranges from -20 to 130 °C.</li> <li>The frequency display ranges from 0 to 159HZ.</li> <li>If the actual values exceed or fall short of the defined range, the values closest to the maximum and minimum values will be displayed.</li> </ol> |
| <b>T2</b>      | Indoor coil temperature            |   |   |   |
| <b>T3</b>      | Outdoor coil temperature           |   |   |   |
| <b>T4</b>      | Ambient temperature                |   |   |   |
| <b>Tb</b>      | Outlet temperature of indoor coil  |   |   |   |
| <b>TP</b>      | Discharge temperature              |   |   |   |
| <b>TH</b>      | Suction temperature                |   |   |   |
| <b>FT</b>      | Targeted frequency                 |   |   |   |
| <b>Fr</b>      | Actual frequency                   |   |   |   |
| <b>IF</b>      | Indoor fan speed                   |   |   |   |
| <b>OF</b>      | Outdoor fan speed                  | 14-FF   | Actual fan speed is equal to the display value converted to decimal value and multiplied by 10. This is measured in RPM.                      | Used for some small capacity motors.<br>The display value is 14-FF (hexadecimal). The corresponding fan speed ranges from 200 to 2550 RPM.  |
| <b>LA</b>      | EXV opening angle                  | 0-FF  | Actual EXV opening value is equal to the display value converted to decimal value and then multiplied by 2.                                   | -   |
| <b>CT</b>      | Compressor continuous running time | 0-FF  | 0-255 minutes   | If the actual value exceeds or falls short of the defined range, the value closest to the maximum and minimum will be displayed.  |
| <b>ST</b>      | Causes of compressor stop          | 0-99  | For a detailed explanation, contact technical support.  | -   |

| Displayed code | Explanation | Displayed value | Meaning | Additional Notes |   |
|----------------|-------------|-----------------|---------|------------------|---|
| A0             | Reserved    |                 |         |                  |   |
| A1             |             |                 |         |                  |   |
| b0             |             |                 |         |                  |   |
| b1             |             |                 |         |                  |   |
| b2             |             |                 |         |                  |   |
| b3             |             |                 |         |                  |   |
| b4             |             |                 | 0-FF    |                  |   |
| b5             |             |                 | 2-28    | -                | - |
| b6             |             |                 | 5-20    |                  |   |
| dL             |             |                 | 5-25    |                  |   |
| Ac             |             |                 |         |                  |   |
| Uo             |             |                 |         |                  |   |
| Td             |             |                 |         |                  |   |
| dA             |             |                 |         |                  |   |
| d5             |             |                 |         |                  |   |
| dT             |             |                 |         |                  |   |

## 5. Outdoor Unit Point Check Function

- A check switch is included on the outdoor PCB.
- Push SW1 to check the unit's status while running. The digital display shows the following codes each time the SW1 is pushed.

For some models,

| Number of Presses | Display   | Remark   |
|-------------------|---|--|
| 0                 | Normal display  | Displays running frequency, running state, or malfunction code   |
| 1                 | Quantity of indoor units with working connection                                  | Display    Number of indoor unit<br>1            1<br>2            2<br>3            3<br>4            4   |
| 2                 | Outdoor unit running mode code  | Standby: 0, Fan only: 1, Cooling: 2, Heating: 3, Forced cooling: 4, Forced defrosting: A   |
| 3                 | Indoor unit A capacity  | The capacity unit is horse power. If the indoor unit is not connected, the digital display shows the following: "--"<br>(9K:1HP,12K:1.2HP,18K:1.5HP) |
| 4                 | Indoor unit B capacity  |  |
| 5                 | Indoor unit C capacity  |  |
| 6                 | Indoor unit D capacity  |  |
| 7                 | Indoor unit E capacity  |  |
| 8                 | Indoor unit A capacity demand code  | Norm code*HP<br>(9K: 1HP,12K: 1.2HP,18K: 1.5HP)  |
| 9                 | Indoor unit B capacity demand code  |  |
| 10                | Indoor unit C capacity demand code  |  |
| 11                | Indoor unit D capacity demand code  |  |
| 12                | Indoor unit E capacity demand code  |  |
| 13                | Outdoor unit mandatory capacity demand code                                       |  |
| 14                | The frequency corresponding to the total indoor units' amandatory capacity demand |  |
| 15                | The frequency after the frequency limit   |  |
| 16                | The frequency sending to compressor control chip                                  |  |

|    |  |  |
|----|--|--|
| 17 | Indoor unit A evaporator outlet temperature (T2BA) | If the temperature is lower than -9°C, the digital display shows "-9." If the temperature is higher than 70°C, the digital display shows "70." If the indoor unit is not connected, the digital display shows: "--"  |
| 18 | Indoor unit B evaporator outlet temperature (T2BB) |  |
| 19 | Indoor unit C evaporator outlet temperature (T2BC) |  |
| 20 | Indoor unit D evaporator outlet temperature (T2BD) |  |
| 21 | Indoor unit E evaporator outlet temperature (T2BE) |  |
| 22 | Indoor unit A room temperature (T1A)               | If the temperature is lower than 0°C, the digital display shows "0." If the temperature is higher than 70°C, the digital display shows "70." If the indoor unit is not connected, the digital display shows: "--"  |
| 23 | Indoor unit B room temperature (T1B)               |  |
| 24 | Indoor unit C room temperature (T1C)               |  |
| 25 | Indoor unit D room temperature (T1D)               |  |
| 26 | Indoor unit E room temperature (T1E)               |  |
| 27 | Indoor unit A evaporator temperature (T2A)         | If the temperature is lower than -9°C, the digital display shows "-9." If the temperature is higher than 70°C, the digital display shows "70." If the indoor unit is not connected, the digital display shows: "--"  |
| 28 | Indoor unit B evaporator temperature (T2B)         |  |
| 29 | Indoor unit C evaporator temperature (T2C)         |  |
| 30 | Indoor unit D evaporator temperature (T2D)         |  |
| 31 | Indoor unit E evaporator temperature (T2E)         |  |
| 32 | Condenser pipe temperature (T3)                    |  |
| 33 | Outdoor ambient temperature (T4)                   |  |
| 34 | Compressor discharge temperature (TP)              | The display value is between 30°–129°C. If the temperature is lower than 30°C, the digital display shows "30." If the temperature is higher than 99°C, the digital display shows single and double digits. For example, if the digital display shows "0.5", the compressor discharge temperature is 105°C. |
| 35 | AD value of current                                | The display value is a hex number.   |
| 36 | AD value of voltage                                | For example, the digital display tube shows "Cd", it means AD value is 205.  |

|    |  |   |   |  |
|----|--|---|---|--|
| 37 | EXV open angle for A indoor unit                   | Actual data/4.<br>If the value is higher than 99, the digital display shows single and double digits.<br>For example, if the digital display shows "2.0", the EXV open angle is 120×4=480p. |   |  |
| 38 | EXV open angle for B indoor unit                   |   |   |  |
| 39 | EXV open angle for C indoor unit                   |   |   |  |
| 40 | EXV open angle for D indoor unit                   |   |   |  |
| 41 | EXV open angle for E indoor unit                   |   |   |  |
| 42 | Frequency limit symbol                             | Bit7  | Frequency limit caused by IGBT radiator | The display value is a hexadecimal number.<br>For example, the digital display show 2A, then Bit5=1, Bit3=1, and Bit1=1.<br><br>This means that a frequency limit may be caused by T4, T3, or the current. |
|    |  | Bit6  | Frequency limit caused by PFC           |  |
|    |  | Bit5  | Frequency limit caused by T4.           |  |
|    |  | Bit4  | Frequency limit caused by T2.           |  |
|    |  | Bit3  | Frequency limit caused by T3.           |  |
|    |  | Bit2  | Frequency limit caused by T5.           |  |
|    |  | Bit1  | Frequency limit caused by current       |  |
|    |  | Bit0  | Frequency limit caused by voltage       |  |
| 43 | Average value of T2                                | (Sum T2 value of all indoor units)/(number of indoor units in good connection)  |   |  |
| 44 | Outdoor unit fan motor state                       | Off: 0, Turbo:1 High speed:2, Med speed: 3, Low speed: 4, Breeze:5, Super breeze: 6   |   |  |
| 45 | The last error or protection code                  | 00 means no malfunction and protection  |   |  |
| 46 | F indoor unit capacity                             | Reserved  |   |  |
| 47 | F indoor unit capacity demand code                 |   |   |  |
| 48 | F indoor unit evaporator outlet temperature (T2BF) |   |   |  |
| 49 | F indoor unit room temperature (T1F)               |   |   |  |
| 50 | F indoor unit evaporator temperature (T2F)         |   |   |  |
| 51 | EXV open angle for F indoor unit                   |   |   |  |
| 52 | Reason of stop                                     |   |   |  |

For key board models,

| Number of Presses | Display   | Remark  |
|-------------------|---|---|
| 0                 | Normal display  | Displays running frequency, running state, or malfunction code  |
| 1                 | Quantity of indoor units with working connection                                  | Display Number of indoor unit<br>1 1<br>2 2<br>3 3<br>4 4   |
| 2                 | Outdoor unit running mode code  | Standby: 0, Fan only: 1, Cooling: 2, Heating: 3, Forced cooling: 4, Forced defrosting: A  |
| 3                 | Indoor unit A capacity  | The capacity unit is horse power. If the indoor unit is not connected, the digital display shows the following: "--"<br>(9K:1HP,12K:1.2HP,18K:1.5HP)  |
| 4                 | Indoor unit B capacity  |   |
| 5                 | Indoor unit C capacity  |   |
| 6                 | Indoor unit D capacity  |   |
| 7                 | Indoor unit E capacity  |   |
| 8                 | Indoor unit A capacity demand code  | Norm code*HP<br>(9K: 1HP,12K: 1.2HP,18K: 1.5HP)   |
| 9                 | Indoor unit B capacity demand code  |   |
| 10                | Indoor unit C capacity demand code  |   |
| 11                | Indoor unit D capacity demand code  |   |
| 12                | Indoor unit E capacity demand code  |   |
| 13                | Outdoor unit amendatory capacity demand code                                      |   |
| 14                | The frequency corresponding to the total indoor units' amendatory capacity demand |   |
| 15                | The frequency after the frequency limit   |   |
| 16                | The frequency sending to compressor control chip                                  |   |
| 17                | Indoor unit A evaporator outlet temperature (T2BA)                                | If the temperature is lower than -9°C, the digital display shows "-9." If the temperature is higher than 70°C, the digital display shows "70." If the indoor unit is not connected, the digital display shows: "--" |
| 18                | Indoor unit B evaporator outlet temperature (T2BB)                                |   |
| 19                | Indoor unit C evaporator outlet temperature (T2BC)                                |   |
| 20                | Indoor unit D evaporator outlet temperature (T2BD)                                |   |
| 21                | Indoor unit E evaporator outlet temperature (T2BE)                                |   |



|    |  |   |
|----|--|---|
| 22 | Indoor unit A room temperature (T1A)       | If the temperature is lower than 0°C, the digital display shows "0." If the temperature is higher than 70°C, the digital display shows "70." If the indoor unit is not connected, the digital display shows: "--"   |
| 23 | Indoor unit B room temperature (T1B)       |   |
| 24 | Indoor unit C room temperature (T1C)       |   |
| 25 | Indoor unit D room temperature (T1D)       |   |
| 26 | Indoor unit E room temperature (T1E)       |   |
| 27 | Indoor unit A evaporator temperature (T2A) | If the temperature is lower than -9°C, the digital display shows "-9." If the temperature is higher than 70°C, the digital display shows "70." If the indoor unit is not connected, the digital display shows: "--"   |
| 28 | Indoor unit B evaporator temperature (T2B) |   |
| 29 | Indoor unit C evaporator temperature (T2C) |   |
| 30 | Indoor unit D evaporator temperature (T2D) |   |
| 31 | Indoor unit E evaporator temperature (T2E) |   |
| 32 | Condenser pipe temperature (T3)            |   |
| 33 | Outdoor ambient temperature (T4)           | The display value is between 30–129°C. If the temperature is lower than 30°C, the digital display shows "30." If the temperature is higher than 99°C, the digital display shows single and double digits. For example, if the digital display shows "0.5", the compressor discharge temperature is 105°C. |
| 34 | Compressor discharge temperature (TP)      |   |
| 35 | AD value of current                        | The display value is a hex number.<br>For example, the digital display tube shows "Cd", it means AD value is 205.   |
| 36 | AD value of AC voltage                     |   |
| 37 | AD value of DC voltage                     |   |
| 38 | EXV open angle for A indoor unit           | Actual data/4.<br>If the value is higher than 99, the digital display shows single and double digits.<br>For example, if the digital display shows "2.0", the EXV open angle is 120×4=480p.   |
| 39 | EXV open angle for B indoor unit           |   |
| 40 | EXV open angle for C indoor unit           |   |
| 41 | EXV open angle for D indoor unit           |   |
| 42 | EXV open angle for E indoor unit           |   |
| 43 | MVI valve open angle                       |   |
| 44 | EVI valve open angle                       |   |

|    |                              |  |   |  |
|----|------------------------------|--|---|--|
| 45 | Frequency limit symbol       | Bit7   | Frequency limit caused by IGBT radiator | The display value is a hexadecimal number.<br>For example, the digital display show 2A, then Bit5=1, Bit3=1, and Bit1=1.<br><br>This means that a frequency limit may be caused by current, IPM or T3. |
|    |                              | Bit6   | Frequency limit caused by PFC           |  |
|    |                              | Bit5   | Frequency limit caused by T4.           |  |
|    |                              | Bit4   | Frequency limit caused by T2.           |  |
|    |                              | Bit3   | Frequency limit caused by T3.           |  |
|    |                              | Bit2   | Frequency limit caused by T5.           |  |
|    |                              | Bit1   | Frequency limit caused by current       |  |
|    |                              | Bit0   | Frequency limit caused by voltage       |  |
| 46 | T2B fault                    | 00:No fault,01:T2B-A fault, ,02:T2B-B fault ,03:T2B-C fault,04:T2B-D fault, 05:T2B-E fault, 06:T2B-F fault(The display priority is A-B-C-D-E-F)                      |   |  |
| 47 | Average value of T2          | (Sum T2 value of all indoor units)/(number of indoor units in good connection)( The heating is the average value of T2, and the cooling is the average value of T2B) |   |  |
| 48 | Outdoor unit fan motor state | Off: 0, Super ultra high speed:1, Super high speed:2, High speed:3, Med speed: 4, Low speed: 5, Breeze:6, Super breeze: 7  |   |  |
| 49 | Reason of stop               |  |   |  |

---

## 6. Error Diagnosis and Troubleshooting Without Error Code

### WARNING

Be sure to turn off unit before any maintenance to prevent damage or injury.

#### 6.1 Remote maintenance

**SUGGESTION:**When troubles occur, please check the following points with customers before field maintenance.

| No. | Problem  | Solution   |
|-----|--|------------|
| 1   | Unit will not start                                      | Page 20~21 |
| 2   | The power switch is on but fans will not start           | Page 20~21 |
| 3   | The temperature on the display board cannot be set       | Page 20~21 |
| 4   | Unit is on but the wind is not cold(hot)                 | Page 20~21 |
| 5   | Unit runs, but shortly stops                             | Page 20~21 |
| 6   | The unit starts up and stops frequently                  | Page 20~21 |
| 7   | Unit runs continuously but insufficient cooling(heating) | Page 20~21 |
| 8   | Cool can not change to heat                              | Page 20~21 |
| 9   | Unit is noisy  | Page 20~21 |

---

## 6.2 Field maintenance

|    | Problem   | Solution   |
|----|---|------------|
| 1  | Unit will not start                                   | Page 22~23 |
| 2  | Compressor will not start but fans run                | Page 22~23 |
| 3  | Compressor and condenser (outdoor) fan will not start | Page 22~23 |
| 4  | Evaporator (indoor) fan will not start                | Page 22~23 |
| 5  | Condenser (Outdoor) fan will not start                | Page 22~23 |
| 6  | Unit runs, but shortly stops                          | Page 22~23 |
| 7  | Compressor short-cycles due to overload               | Page 22~23 |
| 8  | High discharge pressure                               | Page 22~23 |
| 9  | Low discharge pressure                                | Page 22~23 |
| 10 | High suction pressure                                 | Page 22~23 |
| 11 | Low suction pressure                                  | Page 22~23 |
| 12 | Unit runs continuously but insufficient cooling       | Page 22~23 |
| 13 | Too cool  | Page 22~23 |
| 14 | Compressor is noisy                                   | Page 22~23 |
| 15 | Horizontal louver can not revolve                     | Page 22~23 |

| 1.Remote Maintenance                                     | Electrical Circuit   |   |   |   | Refrigerant Circuit |   |   |   |   |   |   |   |  |   |  |   |  |  |
|--|--|---|---|---|---------------------|---|---|---|---|---|---|---|--|---|--|---|--|--|
| Possible causes of trouble                               | Power failure  |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | The main power tripped   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Loose connections  |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Faulty transformer   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | The voltage is too high or too low                                       |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | The remote control is powered off  |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Broken remote control  |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Dirty air filter   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Dirty condenser fins   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | The setting temperature is higher/lower than the room's(cooling/heating) |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | The ambient temperature is too high/low when the mode is cooling/heating |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Fan mode   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | SILENCE function is activated(optional function)                         |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Frosting and defrosting frequently                                       |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
| Unit will not start                                      | ☆  | ☆ | ☆ | ☆ |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
| The power switch is on but fans will not start           |  |   | ☆ | ☆ | ☆                   |   |   |   |   |   |   |   |  |   |  |   |  |  |
| The temperature on the display board cannot be set       |  |   |   |   |                     | ☆ | ☆ |   |   |   |   |   |  |   |  |   |  |  |
| Unit is on but the wind is not cold(hot)                 |  |   |   |   |                     |   |   |   |   | ☆ | ☆ | ☆ |  |   |  |   |  |  |
| Unit runs, but shortly stops                             |  |   |   |   | ☆                   |   |   |   |   | ☆ | ☆ |   |  |   |  |   |  |  |
| The unit starts up and stops frequently                  |  |   |   |   | ☆                   |   |   |   |   |   | ☆ |   |  |   |  | ☆ |  |  |
| Unit runs continuously but insufficient cooling(heating) |  |   |   |   |                     |   |   | ☆ | ☆ | ☆ | ☆ |   |  | ☆ |  |   |  |  |
| Cool can not change to heat                              |  |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
| Unit is noisy  |  |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
| Test method / remedy                                     | Test voltage   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Close the power switch   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Inspect connections - tighten  |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Change the transformer   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Test voltage   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Replace the battery of the remote control                                |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Replace the remote control   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Clean or replace   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Clean  |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Adjust the setting temperature   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Turn the AC later  |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Adjust to cool mode  |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Turn off SILENCE function.   |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |
|  | Turn the AC later  |   |   |   |                     |   |   |   |   |   |   |   |  |   |  |   |  |  |

| 1.Remote Maintenance                                     | Others               |  |                                 |   |  |                                 |
|--|----------------------|--|---------------------------------|---|--|---------------------------------|
| Possible causes of trouble                               | Heavy load condition | Loosen hold down bolts and / or screws | Bad airproof                    | The air inlet or outlet of either unit is blocked | Interference from cell phone towers and remote boosters                                  | Shipping plates remain attached |
| Unit will not start                                      |                      |  |                                 |   |  |                                 |
| The power switch is on but fans will not start           |                      |  |                                 |   | ☆  |                                 |
| The temperature on the display board cannot be set       |                      |  |                                 |   |  |                                 |
| Unit is on but the wind is not cold(hot)                 |                      |  |                                 |   |  |                                 |
| Unit runs, but shortly stops                             |                      |  |                                 |   |  |                                 |
| The unit starts up and stops frequently                  |                      |  |                                 | ☆   |  |                                 |
| Unit runs continuously but insufficient cooling(heating) | ☆                    |  | ☆                               | ☆   |  |                                 |
| Cool can not change to heat                              |                      |  |                                 |   |  |                                 |
| Unit is noisy  |                      | ☆                                      |                                 |   |  | ☆                               |
| Test method / remedy                                     | Check heat load      | Tighten bolts or screws                | Close all the windows and doors | Remove the obstacles                              | Reconnect the power or press <b>ON/OFF</b> button on remote control to restart operation | Remove them                     |

| 2.Field Maintenance                                   | Refrigerant Circuit    |                         |                         |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                            | Others                     |   |  |                                  |                      |  |                                 |  |   |
|---|------------------------|-------------------------|-------------------------|------------------|-----------------------|--|-----------------------------------|--------------------------------------|--|---------------------------------|---|---|----------------------------------|----------------------------|----------------------------|---|--|----------------------------------|----------------------|--|---------------------------------|--|---|
| Possible causes of trouble                            | Compressor stuck       | Shortage of refrigerant | Restricted liquid line  | Dirty air filter | Dirty evaporator coil | Insufficient air through evaporator coil | Overcharge of refrigerant         | Dirty or partially blocked condenser | Air or incompressible gas in refrigerant cycle | Short cycling of condensing air | High temperature condensing medium      | Insufficient condensing medium          | Broken compressor internal parts | Inefficient compressor     | Expansion valve obstructed | Expansion valve or capillary tube closed completely | Leaking power element on expansion valve | Poor installation of feeler bulb | Heavy load condition | Loosen hold down bolts and / or screws | Shipping plates remain attached | Poor choices of capacity                             | Contact of piping with other piping or external plate                 |
| Unit will not start                                   |                        |                         |                         |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                            |                            |   |  |                                  |                      |  |                                 |  |   |
| Compressor will not start but fans run                | ☆                      |                         |                         |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                            |                            |   |  |                                  |                      |  |                                 |  |   |
| Compressor and condenser (outdoor) fan will not start |                        |                         |                         |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                            |                            |   |  |                                  |                      |  |                                 |  |   |
| Evaporator (indoor) fan will not start                |                        |                         |                         |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                            |                            |   |  |                                  |                      |  |                                 |  |   |
| Condenser (Outdoor) fan will not start                |                        |                         |                         |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                            |                            |   |  |                                  |                      |  |                                 |  |   |
| Unit runs, but shortly stops                          |                        | ☆                       | ☆                       |                  |                       |  | ☆                                 | ☆                                    |  |                                 |   |   |                                  |                            |                            | ☆   | ☆  |                                  |                      |  |                                 |  |   |
| Compressor short-cycles due to overload               |                        | ☆                       |                         |                  |                       |  | ☆                                 | ☆                                    |  |                                 |   |   |                                  |                            |                            |   |  |                                  |                      |  |                                 |  |   |
| High discharge pressure                               |                        |                         |                         |                  |                       |  | ☆                                 | ☆                                    | ☆  | ☆                               | ☆                                       |   |                                  |                            |                            |   |  |                                  |                      |  |                                 |  |   |
| Low discharge pressure                                |                        | ☆                       |                         |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  | ☆                          |                            |   |  |                                  |                      |  |                                 |  |   |
| High suction pressure                                 |                        |                         |                         |                  |                       |  | ☆                                 |                                      |  |                                 |   |   |                                  | ☆                          |                            |   |  | ☆                                | ☆                    |  |                                 |  |   |
| Low suction pressure                                  |                        | ☆                       | ☆                       | ☆                | ☆                     | ☆  |                                   |                                      |  |                                 |   |   |                                  | ☆                          | ☆                          | ☆   |  |                                  |                      |  |                                 |  |   |
| Unit runs continuously but insufficient cooling       |                        | ☆                       | ☆                       | ☆                | ☆                     | ☆  |                                   | ☆                                    | ☆  | ☆                               |   |   |                                  | ☆                          |                            |   |  |                                  | ☆                    |  |                                 | ☆  |   |
| Too cool  |                        |                         |                         |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                            |                            |   |  |                                  |                      |  |                                 |  |   |
| Compressor is noisy                                   |                        |                         |                         |                  |                       |  | ☆                                 |                                      |  |                                 |   |   | ☆                                |                            |                            |   |  |                                  |                      | ☆                                      | ☆                               |  | ☆   |
| Horizontal louver can not revolve                     |                        |                         |                         |                  |                       |  |                                   |                                      |  |                                 |   |   |                                  |                            |                            |   |  |                                  |                      |  |                                 |  |   |
| Test method / remedy                                  | Replace the compressor | Leak test               | Replace restricted part | Clean or replace | Clean coil            | Check fan                                | Change charged refrigerant volume | Clean condenser or remove obstacle   | Purge, evacuate and recharge                   | Remove obstruction to air flow  | Remove obstruction in air or water flow | Remove obstruction in air or water flow | Replace compressor               | Test compressor efficiency | Replace valve              | Replace valve                                       | Replace valve                            | Fix feeler bulb                  | Check heat load      | Tighten bolts or screws                | Remove them                     | Choose AC of larger capacity or add the number of AC | Rectify piping so as not to contact each other or with external plate |

| 2.Field Maintenance                                   | Electrical Circuit |                          |                               |                           |                                  |   |   |                                   |                             |  |                                    |              |                            |                                  |                                  |
|---|--------------------|--------------------------|-------------------------------|---------------------------|----------------------------------|---|---|-----------------------------------|-----------------------------|--|------------------------------------|--------------|----------------------------|----------------------------------|----------------------------------|
| Possible causes of trouble                            | Power failure      | Blown fuse or varistor   | Loose connections             | Shorted or broken wires   | Safety device opens              | Faulty thermostat / room temperature sensor     | Wrong setting place of temperature sensor                           | Faulty transformer                | Shorted or open capacitor   | Faulty magnetic contactor for compressor | Faulty magnetic contactor for fan  | Low voltage  | Faulty stepping motor      | Shorted or grounded compressor   | Shorted or grounded fan motor    |
| Unit will not start                                   | ☆                  | ☆                        | ☆                             | ☆                         | ☆                                |   |   | ☆                                 |                             |  |                                    |              |                            |                                  |                                  |
| Compressor will not start but fans run                |                    |                          |                               | ☆                         |                                  | ☆   |   |                                   | ☆                           | ☆  |                                    |              |                            | ☆                                |                                  |
| Compressor and condenser (outdoor) fan will not start |                    |                          |                               | ☆                         |                                  | ☆   |   |                                   |                             | ☆  |                                    |              |                            |                                  |                                  |
| Evaporator (indoor) fan will not start                |                    |                          |                               | ☆                         |                                  |   |   |                                   | ☆                           |  | ☆                                  |              |                            |                                  | ☆                                |
| Condenser (Outdoor) fan will not start                |                    |                          |                               | ☆                         |                                  | ☆   |   |                                   | ☆                           |  | ☆                                  |              |                            |                                  | ☆                                |
| Unit runs, but shortly stops                          |                    |                          |                               |                           |                                  |   |   |                                   |                             | ☆  |                                    | ☆            |                            |                                  |                                  |
| Compressor short-cycles due to overload               |                    |                          |                               |                           |                                  |   |   |                                   |                             | ☆  |                                    | ☆            |                            |                                  |                                  |
| High discharge pressure                               |                    |                          |                               |                           |                                  |   |   |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Low discharge pressure                                |                    |                          |                               |                           |                                  |   |   |                                   |                             |  |                                    |              |                            |                                  |                                  |
| High suction pressure                                 |                    |                          |                               |                           |                                  |   |   |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Low suction pressure                                  |                    |                          |                               |                           |                                  |   |   |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Unit runs continuously but insufficient cooling       |                    |                          |                               |                           |                                  |   |   |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Too cool  |                    |                          |                               |                           |                                  | ☆   | ☆   |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Compressor is noisy                                   |                    |                          |                               |                           |                                  |   |   |                                   |                             |  |                                    |              |                            |                                  |                                  |
| Horizontal louver can not revolve                     |                    |                          | ☆                             | ☆                         |                                  |   |   |                                   |                             |  |                                    |              | ☆                          |                                  |                                  |
| Test method / remedy                                  | Test voltage       | Inspect fuse type & size | Inspect connections - tighten | Test circuits with tester | Test continuity of safety device | Test continuity of thermostat / sensor & wiring | Place the temperature sensor at the central of the air inlet grille | Check control circuit with tester | Check capacitor with tester | Test continuity of coil & contacts       | Test continuity of coil & contacts | Test voltage | Replace the stepping motor | Check resistance with multimeter | Check resistance with multimeter |



## 7. Quick Maintenance by Error Code

If you do not have the time to test which specific parts are faulty, you can directly change the required parts according the error code. You can find the parts to replace by error code in the following table.

| Part requiring replacement | Error Code |       |       |       |       |          |       |       |       |       |       |
|----------------------------|------------|-------|-------|-------|-------|----------|-------|-------|-------|-------|-------|
|                            | EH 00      | EL 01 | EH 03 | EH 60 | EH 61 | (O)EC 50 | EH 02 | PC 02 | EC 53 | EC 52 | EC 54 |
| Indoor PCB                 | ✓          | ✓     | ✓     | ✓     | ✓     | x        | ✓     | x     | x     | x     | x     |
| Outdoor PCB                | x          | ✓     | x     | x     | x     | ✓        | x     | ✓     | ✓     | ✓     | ✓     |
| Indoor fan motor           | x          | x     | ✓     | x     | x     | x        | x     | x     | x     | x     | x     |
| T1 sensor                  | x          | x     | x     | ✓     | x     | x        | x     | x     | x     | x     | x     |
| T2 Sensor                  | x          | x     | x     | x     | ✓     | x        | x     | x     | x     | x     | x     |
| T3 Sensor                  | x          | x     | x     | x     | x     | ✓        | x     | x     | x     | ✓     | x     |
| T4 Sensor                  | x          | x     | x     | x     | x     | ✓        | x     | x     | ✓     | x     | x     |
| TP Sensor                  | x          | x     | x     | x     | x     | ✓        | x     | x     | x     | x     | ✓     |
| Reactor                    | x          | ✓     | x     | x     | x     | x        | x     | x     | x     | x     | x     |
| IPM module board           | x          | ✓     | x     | x     | x     | x        | x     | x     | x     | x     | x     |
| Overload protector         | x          | x     | x     | x     | x     | x        | x     | ✓     | x     | x     | x     |

| Part requiring replacement | Error Code |       |                    |                                   |                 |                                |          |
|----------------------------|------------|-------|--------------------|-----------------------------------|-----------------|--------------------------------|----------|
|                            | EC 51      | EC 56 | EC 07/<br>(O)EC 71 | PC 08/(O) PC 44<br>/PC 46 / PC 49 | PC 00/<br>PC 04 | PC 01/(O)PC 10<br>/PC 11/PC 12 | (O)PC 0F |
| Outdoor PCB                | ✓          | ✓     | ✓                  | ✓                                 | ✓               | ✓                              | ✓        |
| Outdoor fan motor          | x          | x     | ✓                  | ✓                                 | ✓               | x                              | x        |
| T3 Sensor                  | x          | x     | x                  | x                                 | x               | x                              | x        |
| T4 Sensor                  | x          | x     | x                  | x                                 | x               | x                              | x        |
| TP Sensor                  | x          | x     | x                  | x                                 | x               | x                              | x        |
| T2B Sensor                 | x          | ✓     | x                  | x                                 | x               | x                              | x        |
| Reactor or inductance      | x          | x     | x                  | ✓                                 | ✓               | ✓                              | ✓        |
| Compressor                 | x          | x     | x                  | x                                 | ✓               | x                              | x        |
| IPM module board           | x          | x     | x                  | ✓                                 | ✓               | ✓                              | x        |
| Bridge rectifier           | x          | x     | x                  | ✓                                 | ✓               | ✓                              | x        |
| PFC module                 | x          | x     | x                  | x                                 | x               | x                              | ✓        |
| Additional refrigerant     | x          | x     | x                  | x                                 | x               | x                              | x        |
| Electric control box       | x          | x     | x                  | x                                 | x               | x                              | x        |
| High pressure switch       | x          | x     | x                  | x                                 | x               | x                              | x        |
| Low pressure switch        | x          | x     | x                  | x                                 | x               | x                              | x        |

| Part requiring replacement | Error Code |       |       |       |          |          |          |                    |
|----------------------------|------------|-------|-------|-------|----------|----------|----------|--------------------|
|                            | PC 40      | EC 72 | PC 43 | PC 45 | (O)PC 06 | (O)PC 0A | (O)PC 30 | PC 03/<br>(O)PC 31 |
| Outdoor PCB                | ✓          | ✓     | ✓     | x     | ✓        | ✓        | ✓        | ✓                  |
| Outdoor fan motor          | x          | ✓     | x     | x     | x        | ✓        | ✓        | ✓                  |
| T3 Sensor                  | x          | x     | x     | x     | x        | ✓        | x        | x                  |
| T4 Sensor                  | x          | x     | x     | x     | x        | x        | x        | x                  |
| TP Sensor                  | x          | x     | x     | x     | ✓        | x        | x        | x                  |
| T2B Sensor                 | x          | x     | x     | x     | x        | x        | x        | x                  |
| Reactor or inductance      | x          | x     | x     | x     | x        | x        | x        | x                  |
| Compressor                 | x          | x     | ✓     | x     | x        | x        | x        | x                  |
| IPM module board           | x          | x     | x     | ✓     | x        | x        | x        | x                  |
| Bridge rectifier           | x          | x     | x     | x     | x        | x        | x        | x                  |
| PFC module                 | x          | x     | x     | x     | x        | x        | x        | x                  |
| Additional refrigerant     | x          | x     | x     | x     | ✓        | ✓        | x        | ✓                  |
| Electric control box       | ✓          | x     | x     | x     | x        | x        | x        | x                  |
| High pressure switch       | x          | x     | x     | x     | x        | x        | ✓        | x                  |
| Low pressure switch        | x          | x     | x     | x     | x        | x        | x        | ✓                  |

**Note:** For certain models, outdoor PCB could not be removed separately. In this case, the outdoor electric control box should be replaced as a whole.

## 8. Troubleshooting by Error Code


### 8.1 EH 00 / EC 51 (EEPROM parameter error diagnosis and solution)

**Description:** Indoor or outdoor PCB main chip does not receive feedback from EEPROM chip.

**Recommended parts to prepare:**

- Indoor PCB
- Outdoor PCB


**Troubleshooting and repair:**

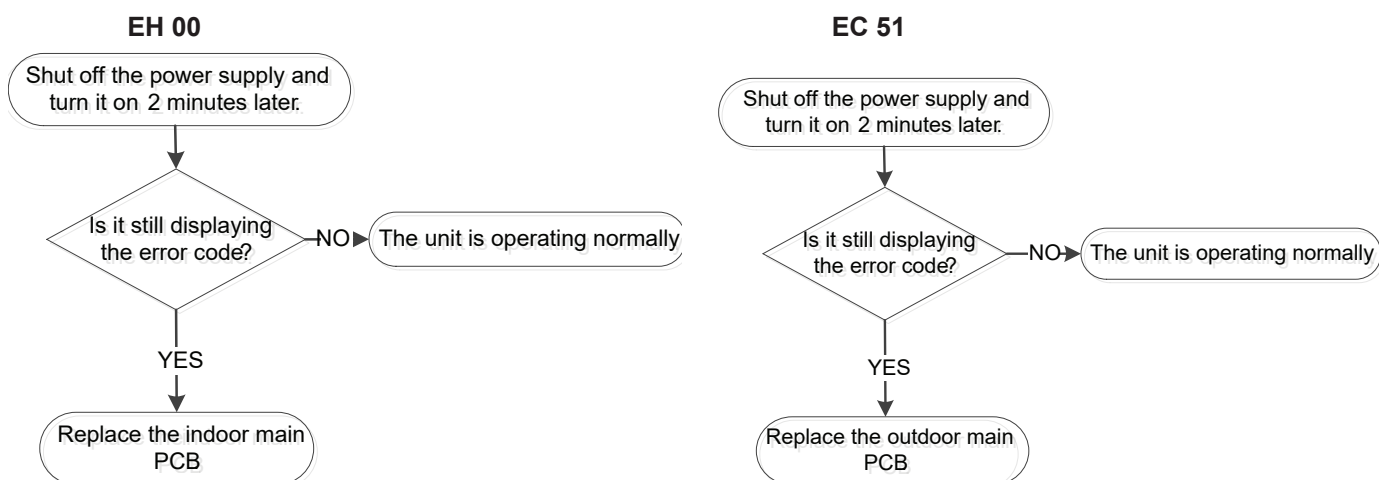

**Remarks:**

**EEPROM:** A read-only memory whose contents can be erased and reprogrammed using a pulsed voltage.

The location of the EEPROM chip on the indoor and outdoor PCB is shown in the following two images:

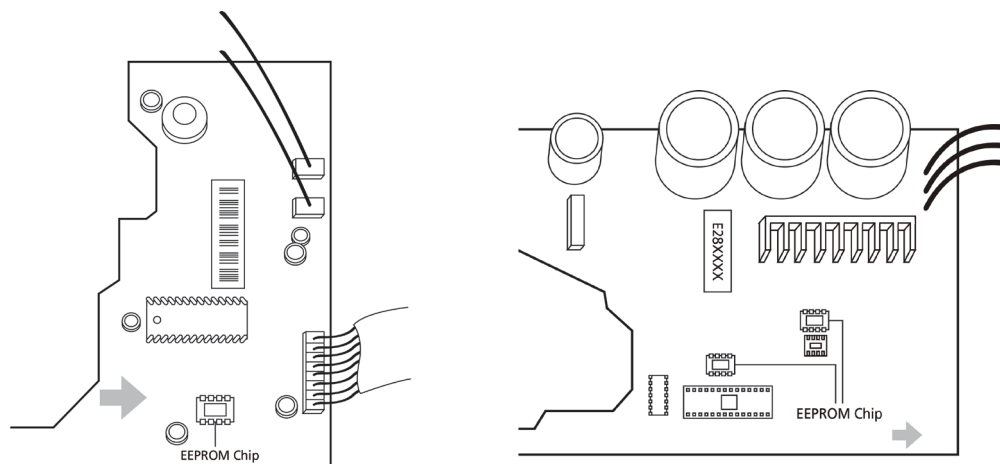

**Note:** For certain models, outdoor PCB could not be removed separately. In this case, the outdoor electric control box should be replaced as a whole. This pictures are only for reference, actual appearance may vary.

---


## 8.2 EL 01 (Indoor and outdoor unit communication error diagnosis and solution)

**Description:** Indoor unit does not receive the feedback from outdoor unit during 110 seconds and this condition happens 4 times continuously.

**Recommended parts to prepare:**

- Indoor PCB
- Outdoor PCB
- IPM module board
- Reactor


**Troubleshooting and repair:**

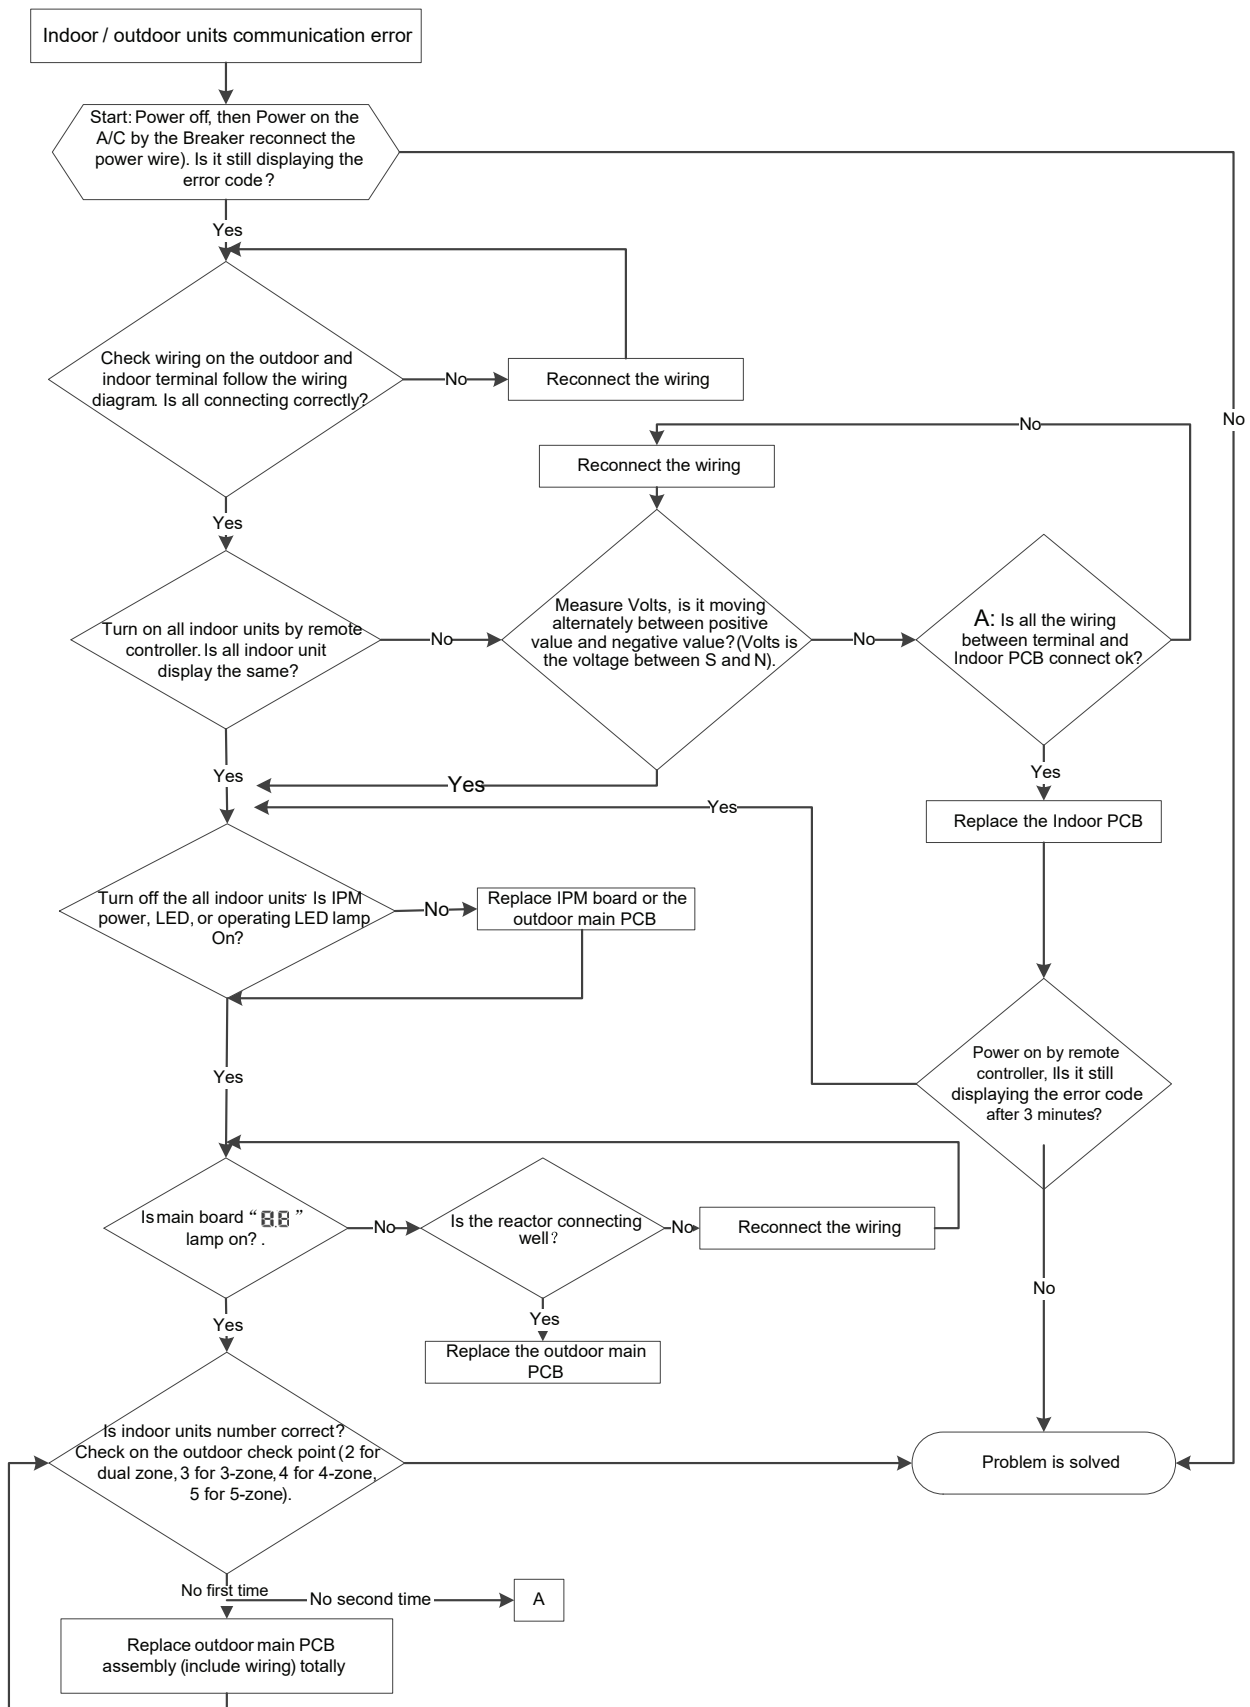

---

**Remarks:**

- Use a multimeter to test the resistance of the reactor which does not connect with capacitor.
- The normal value should be around zero ohm. Otherwise, the reactor must have malfunction.

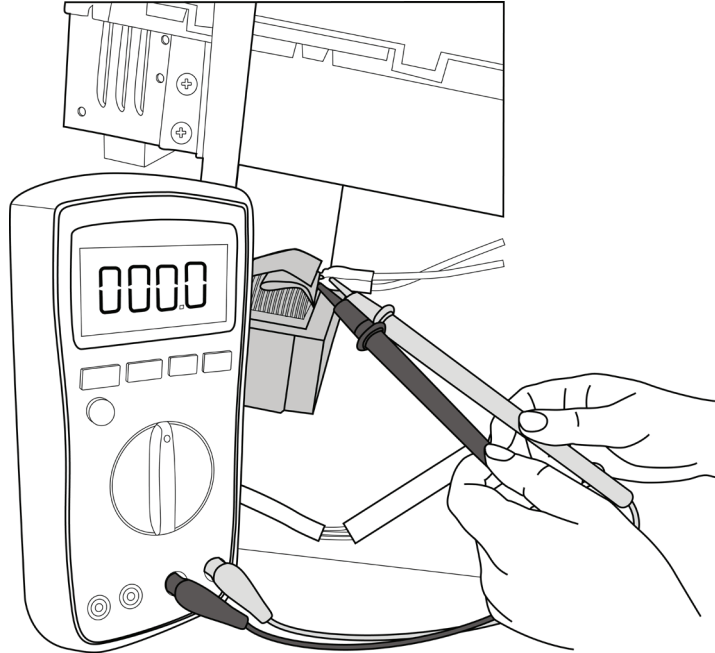

**Note:** The picture and the value are only for reference, actual condition and specific value may vary.


### 8.3 EH 03 / EC 07 (Fan Speed Is Operating Outside of Normal Range) / EC 71 (Over Current Failure of Outdoor DC Fan Motor) Diagnosis and Solution

**Description:** When indoor / outdoor fan speed keeps too low or too high for a certain time, the LED displays the failure code and the AC turns off.

**Recommended parts to prepare:**

- Connection wires
- Fan assembly
- Fan motor
- PCB

**Troubleshooting and repair:**

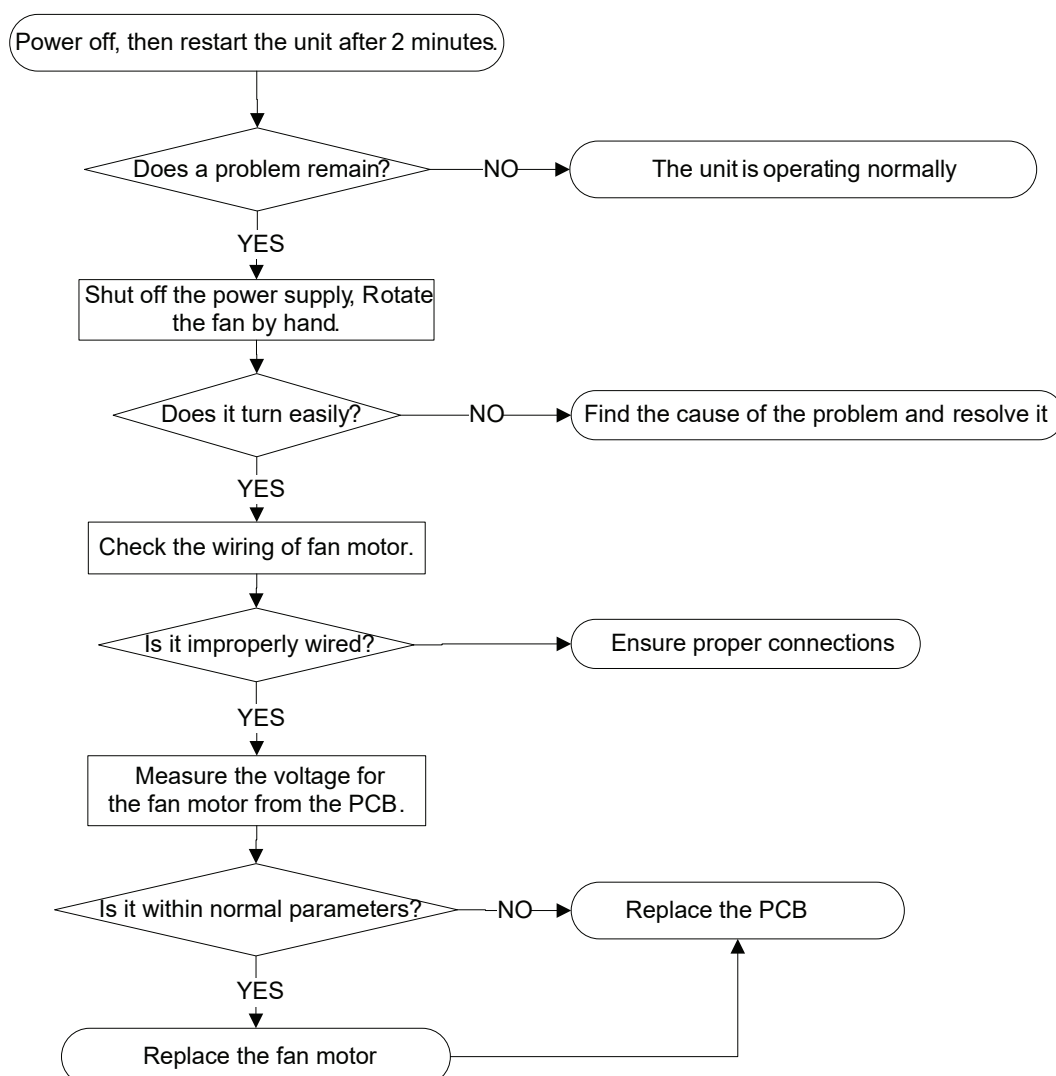

**Note:** For certain models, outdoor PCB could not be removed separately. In this case, the outdoor electric control box should be replaced as a whole.




**Index:**

**1. Indoor or Outdoor DC Fan Motor(control chip is in fan motor)**

Power on and when the unit is in standby, measure the voltage of pin1-pin3, pin4-pin3 in fan motor connector. If the value of the voltage is not in the range showing in below table, the PCB must has problems and need to be replaced.


- DC motor voltage input and output (voltage: 220-240V~)

| No. | Color  | Signal | Voltage    |
|-----|--------|--------|------------|
| 1   | Red    | Vs/Vm  | 192V~380V  |
| 2   | ---    | ---    | ---        |
| 3   | Black  | GND    | 0V         |
| 4   | White  | Vcc    | 13.5-16.5V |
| 5   | Yellow | Vsp    | 0~6.5V     |
| 6   | Blue   | FG     | 13.5-16.5V |

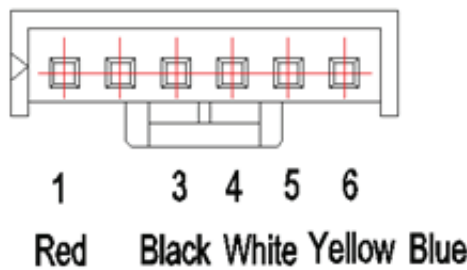


**2. Outdoor DC Fan Motor (control chip is in outdoor PCB)**

Release the UVW connector. Measure the resistance of U-V, U-W, V-W. If the resistance is not equal to each other, the fan motor must has problems and need to be replaced. Otherwise, the PCB must has problems and need to be replaced.

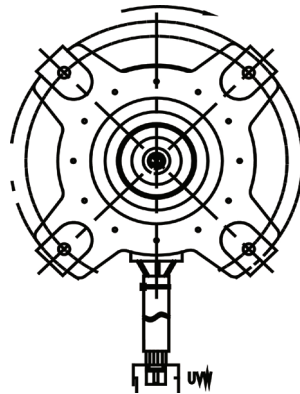

**3. Indoor AC Fan Motor**

Power on and set the unit running in fan mode at high fan speed. After running for 15 seconds, measure the voltage of pin1 and pin2. If the value of the voltage is less than 100V (208~240V power supply) or 50V (115V power supply), the PCB must has problems and need to be replaced.

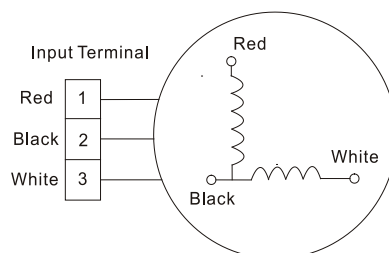



## 8.4 EH 60 / EH 61 / EC 53 / EC 52 / EC 54 / EC 56 / (ODU) EC 50 (Open circuit or short circuit of temperature sensor diagnosis and solution)

**Description:** If the sampling voltage is lower than 0.06V or higher than 4.94V, the LED displays the failure code.

**Recommended parts to prepare:**

- Connection wires
- Sensors
- PCB

**Troubleshooting and repair:**

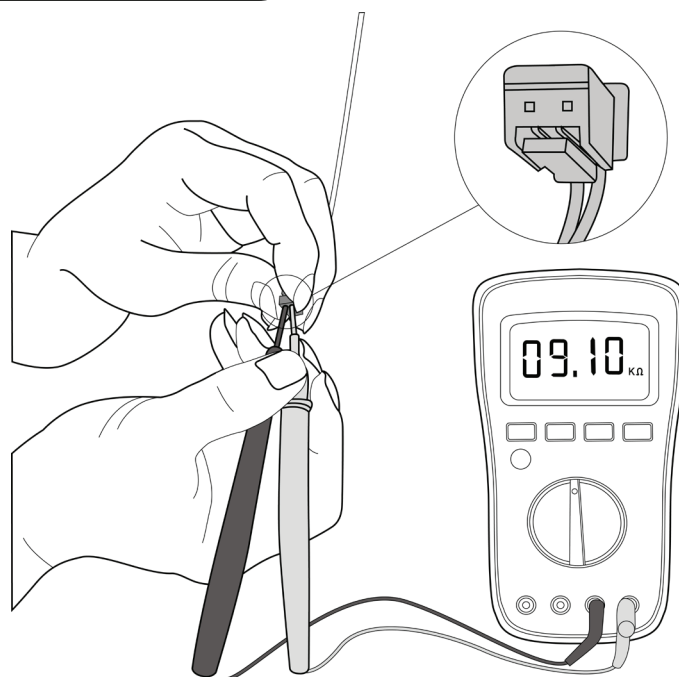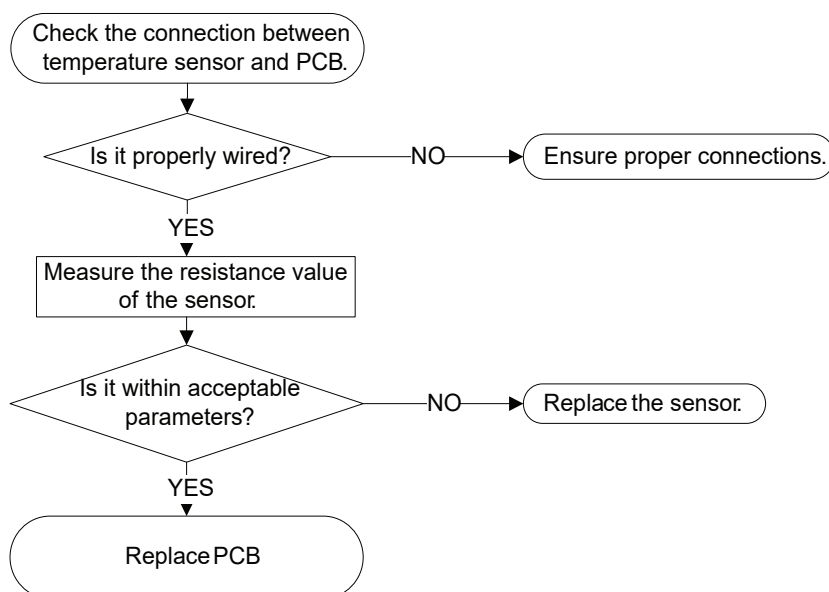

**Note:** For certain models, outdoor PCB could not be removed separately. In this case, the outdoor electric control box should be replaced as a whole. This picture and the value are only for reference, actual appearance and value may vary

---


## **8.5 PC 08 (Current overload protection) / PC 44 (Outdoor unit zero speed protection) / PC 46 (Compressor speed has been out of control) / PC 49 (Compressor overcurrent failure)**

**Description:** An abnormal current rise is detected by checking the specified current detection circuit.

**Recommended parts to prepare:**

- Outdoor PCB
- Connection wires
- Bridge rectifier
- PFC circuit or reactor
- Refrigeration piping system
- Pressure switch
- Outdoor fan
- IPM module board

**Troubleshooting and repair:**

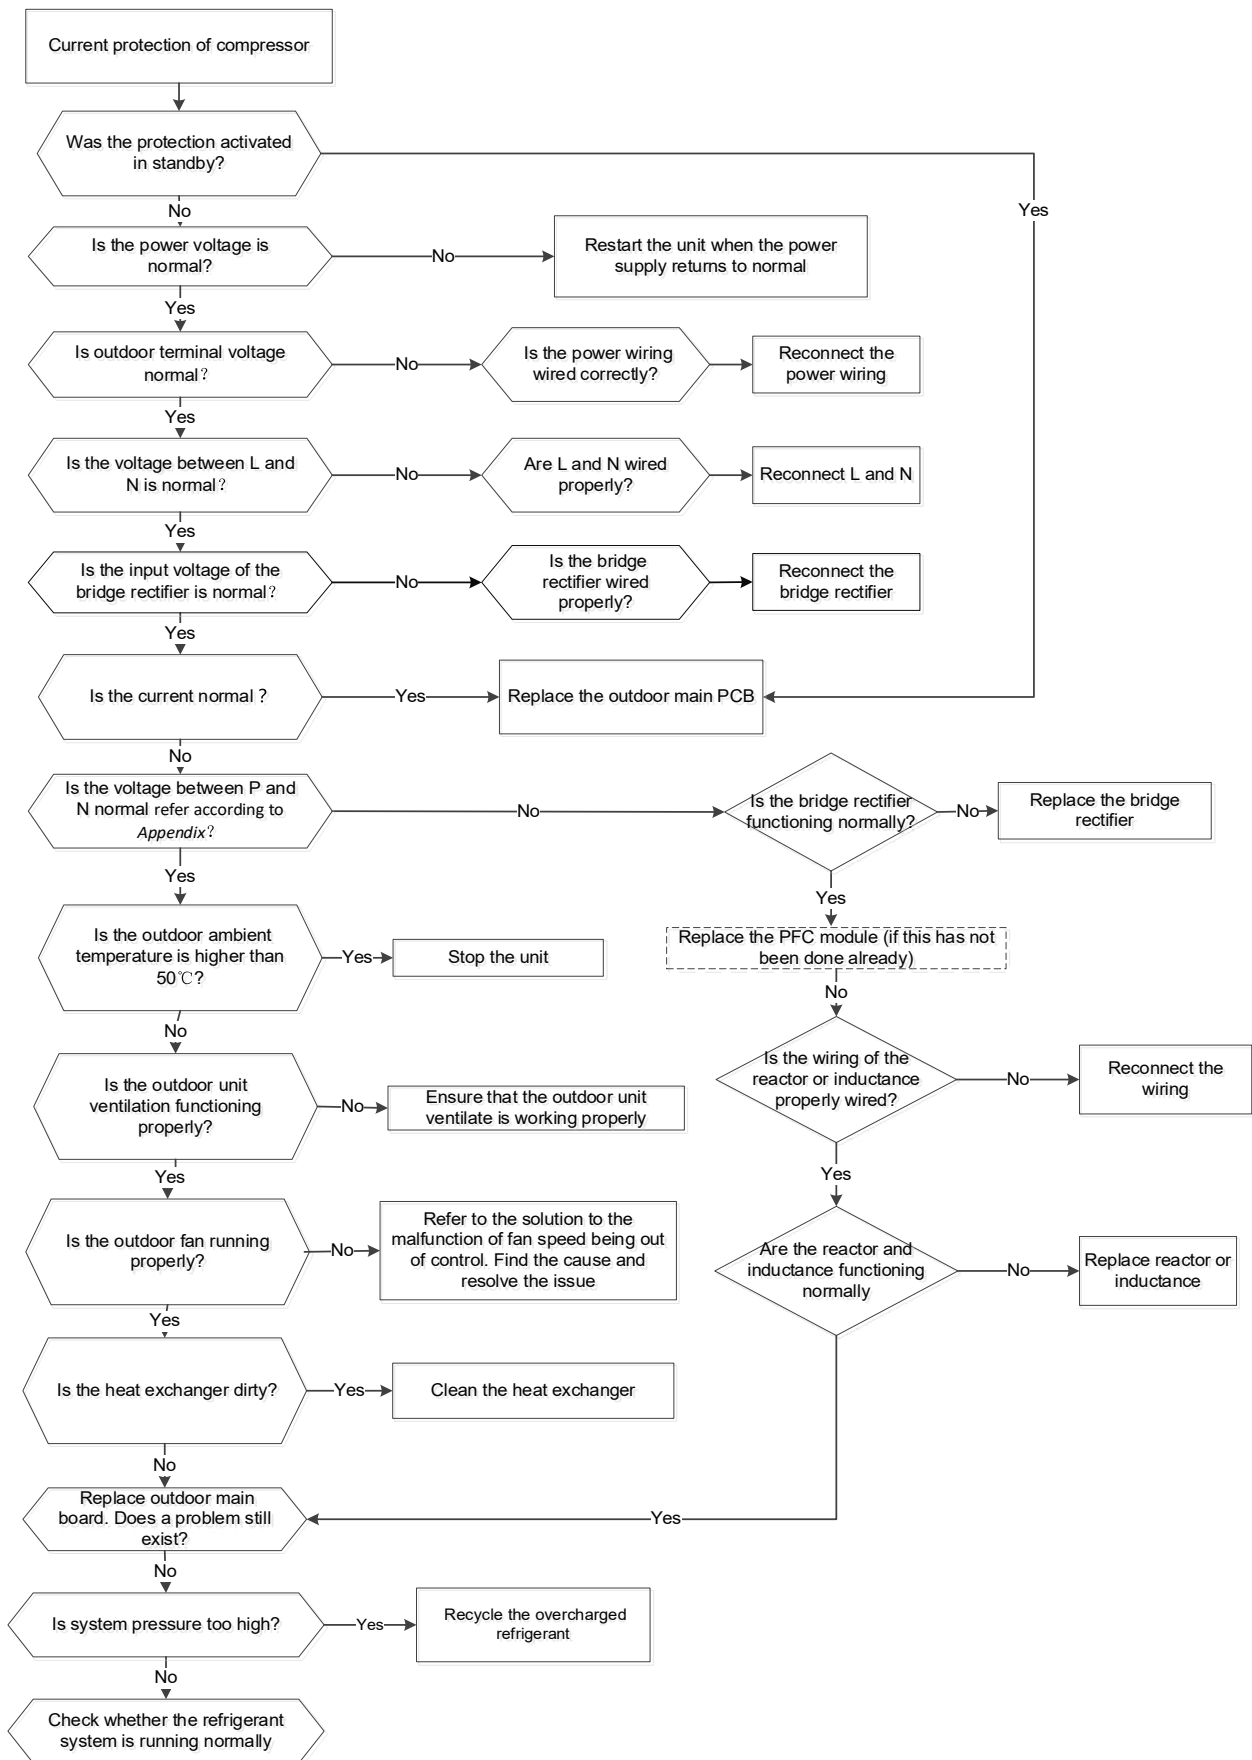

---

## 8.6 PC 00 (IPM malfunction diagnosis and solution) & (IDU) PC 04 (Inverter compressor drive error diagnosis and solution)

**Description:**PC 00/(ODU)P6:When the voltage signal the IPM sends to the compressor drive chip is abnormal, the LED displays the failure code and the AC turns off.


(IDU)PC 04:The driven chip cannot detect the right rotor position of compressor

### Recommended parts to prepare:

- Connection wires
- IPM module board
- Outdoor fan assembly
- Compressor
- Outdoor PCB
- Reactor or inductance
- Bridge rectifier

### Troubleshooting and repair:

At first test the resistance between every two ports of U, V, W of IPM and P, N. If any result of them is 0 or close to 0, the IPM is defective. Otherwise, please follow the procedure below:

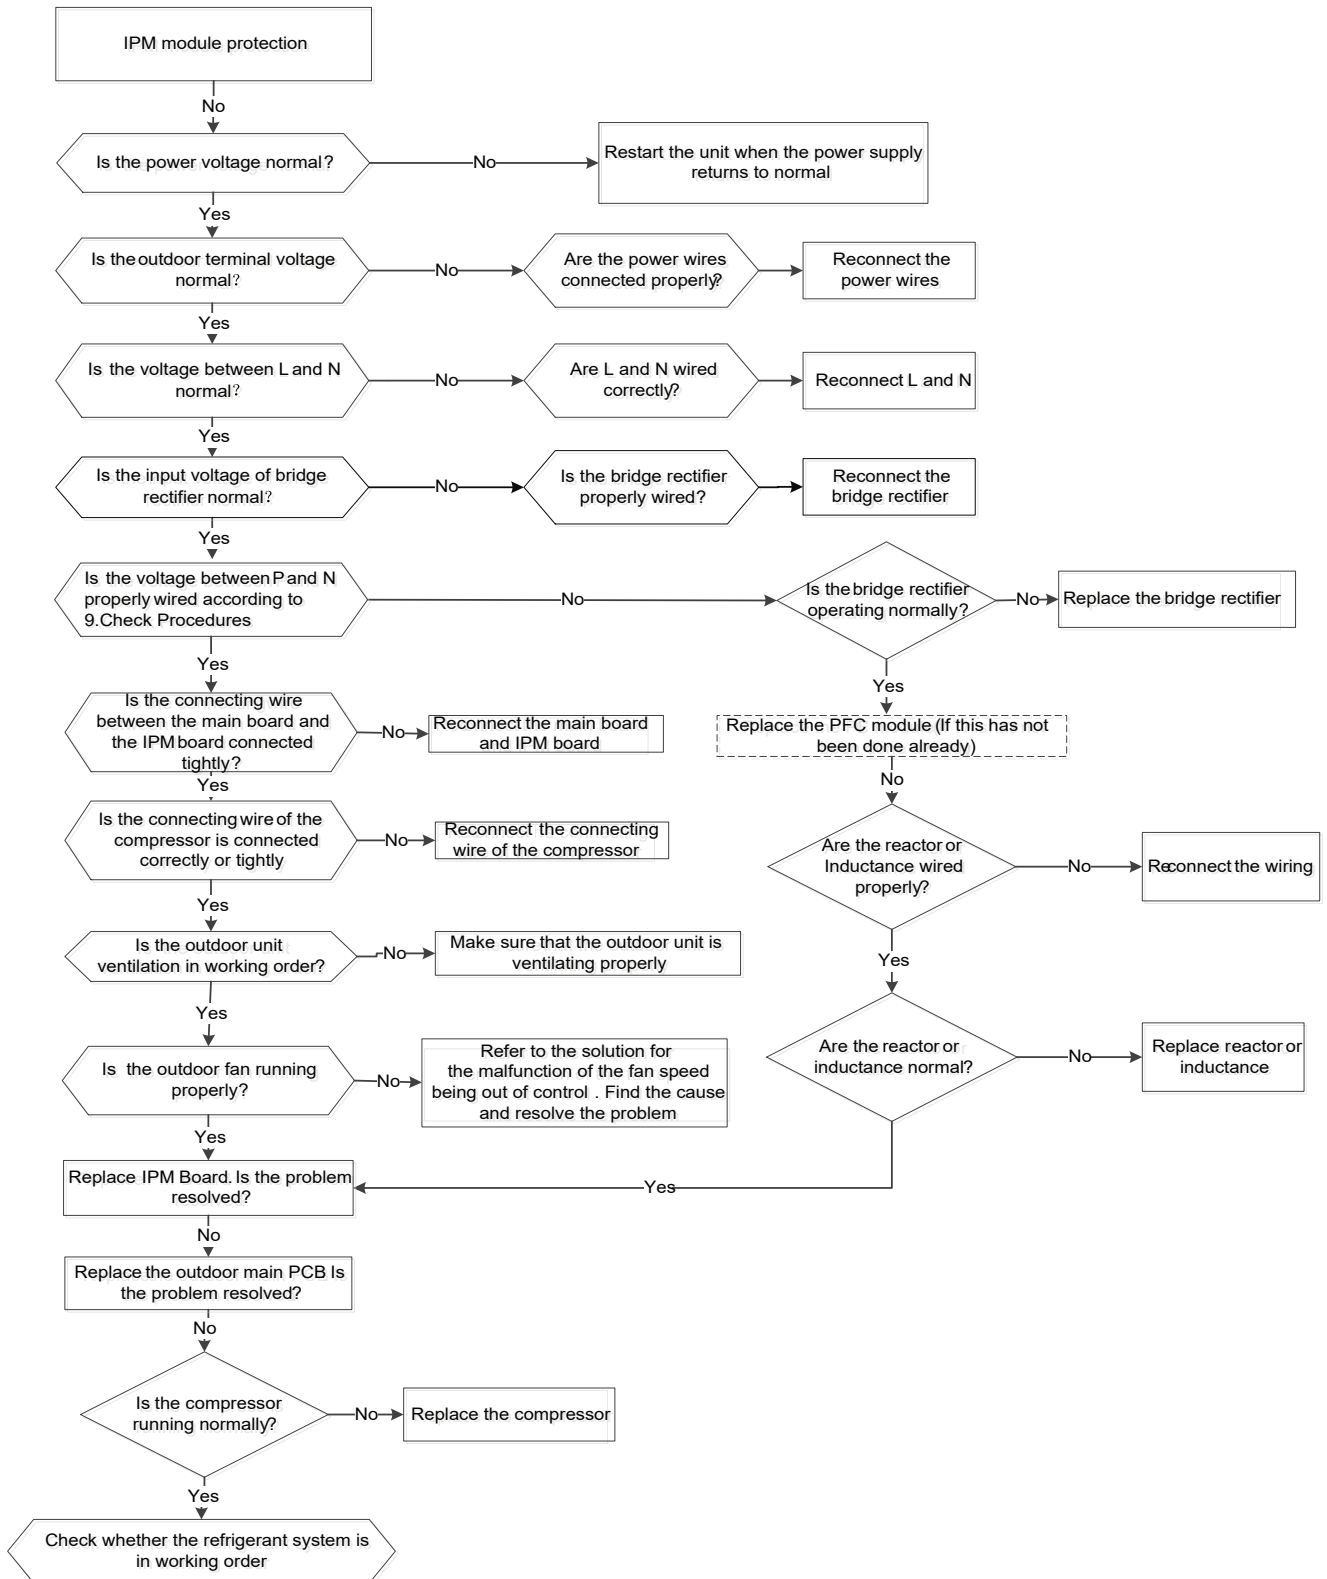

**Note:** For certain models, outdoor PCB could not be removed separately. In this case, the outdoor electric control box should be replaced as a whole.

---


## 8.7 PC 01 / E5 (Over voltage or too low voltage protection) / PC 10 (Outdoor unit low AC voltage protection) / PC 11 (Outdoor unit main control board DC bus high voltage protection) / PC 12 (Outdoor unit main control board DC bus high voltage protection /341 MCE error) Diagnosis and Solution

**Description:** Abnormal increases or decreases in voltage are detected by checking the specified voltage detection circuit.

### **Recommended parts to prepare:**

- Power supply wires
- IPM module board
- Outdoor PCB
- Bridge rectifier
- PFC circuit or reactor

### **Troubleshooting and repair:**

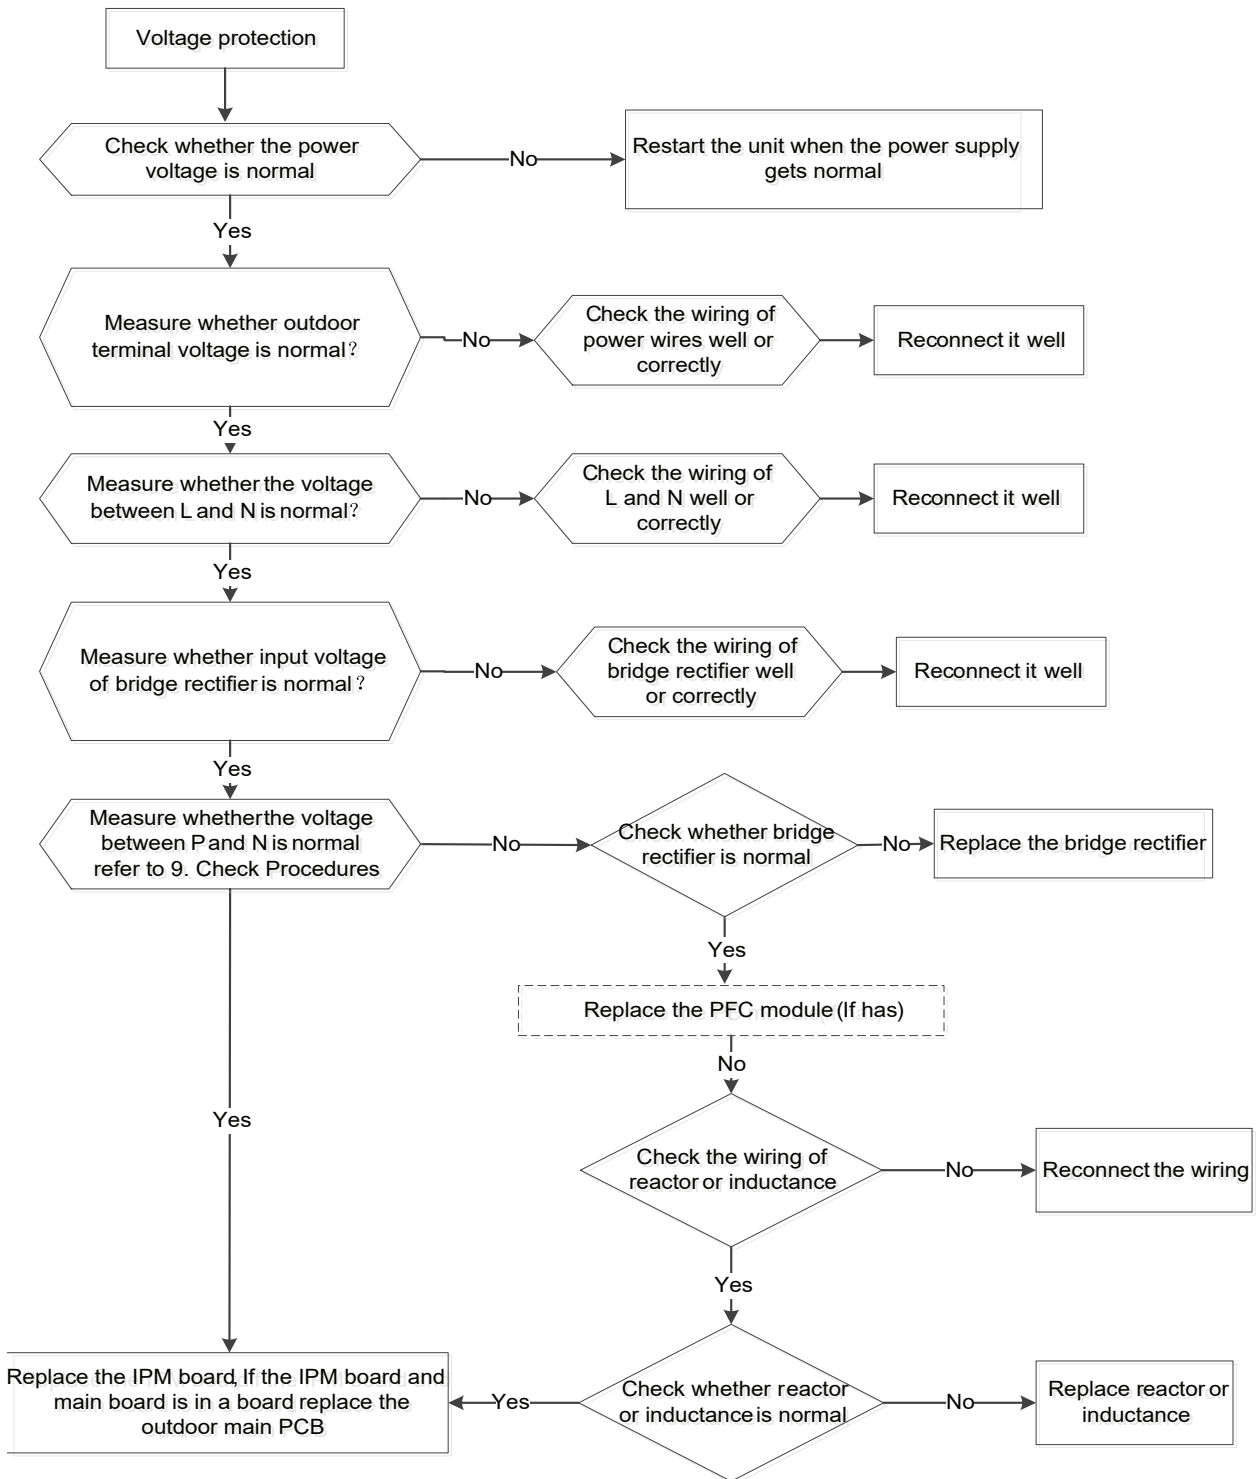

**Note:** For certain models, outdoor PCB could not be removed separately. In this case, the outdoor electric control box should be replaced as a whole.




## 8.8 PC 40 (Communication malfunction between IPM board and outdoor main board diagnosis and solution)

**Description:** The main PCB cannot detect the IPM board.

**Recommended parts to prepare:**

- Connection wires
- Outdoor PCB
- IPM module board
- Electric control box

**Troubleshooting and repair:**

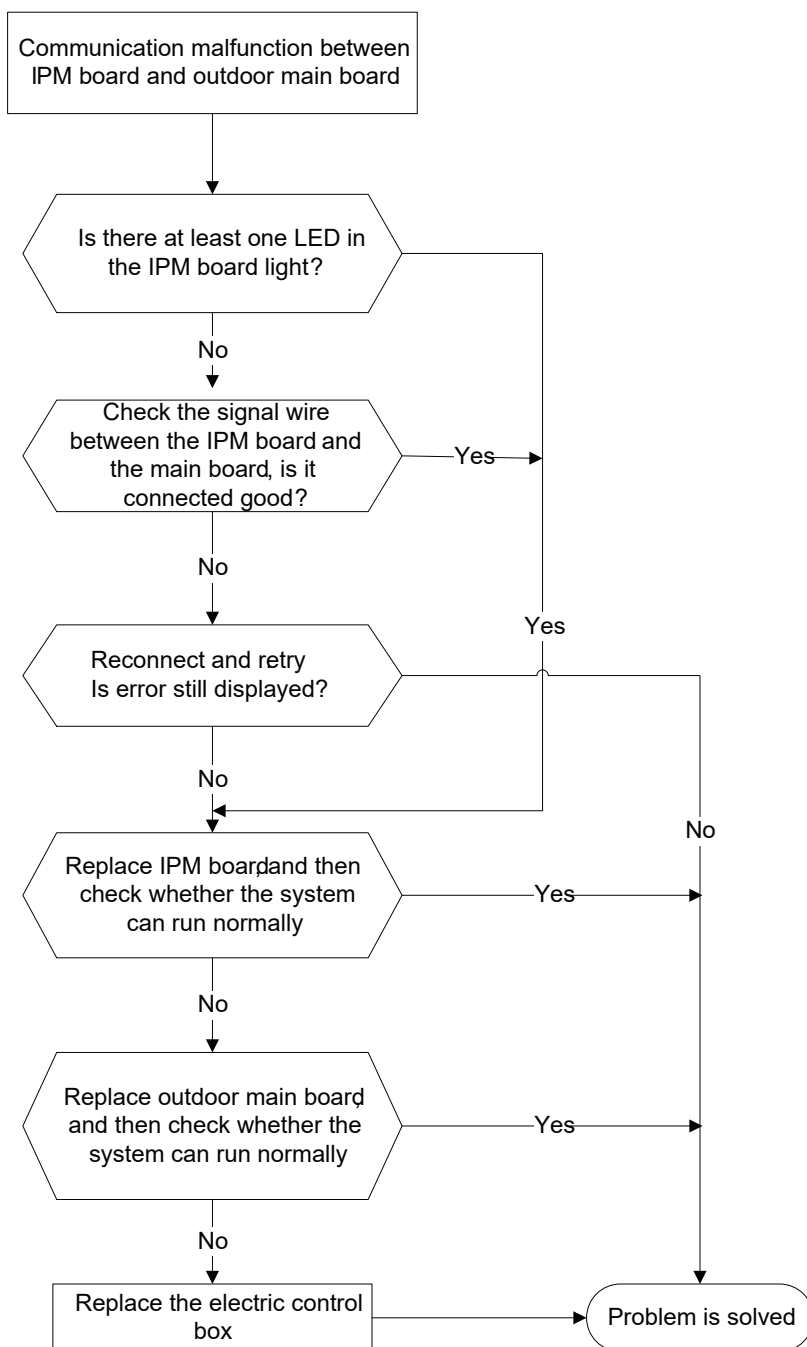


## 8.9 (ODU) PC 0F (PFC module protection diagnosis and solution)

**Description:** Outdoor PCB detects PFC signal is low voltage or DC voltage is lower than 340V for 6 seconds when quick check.

### Recommended parts to prepare:

- Connection wires
- Outdoor PCB
- Inductance
- PFC circuit or IPM module board

### Troubleshooting and repair:

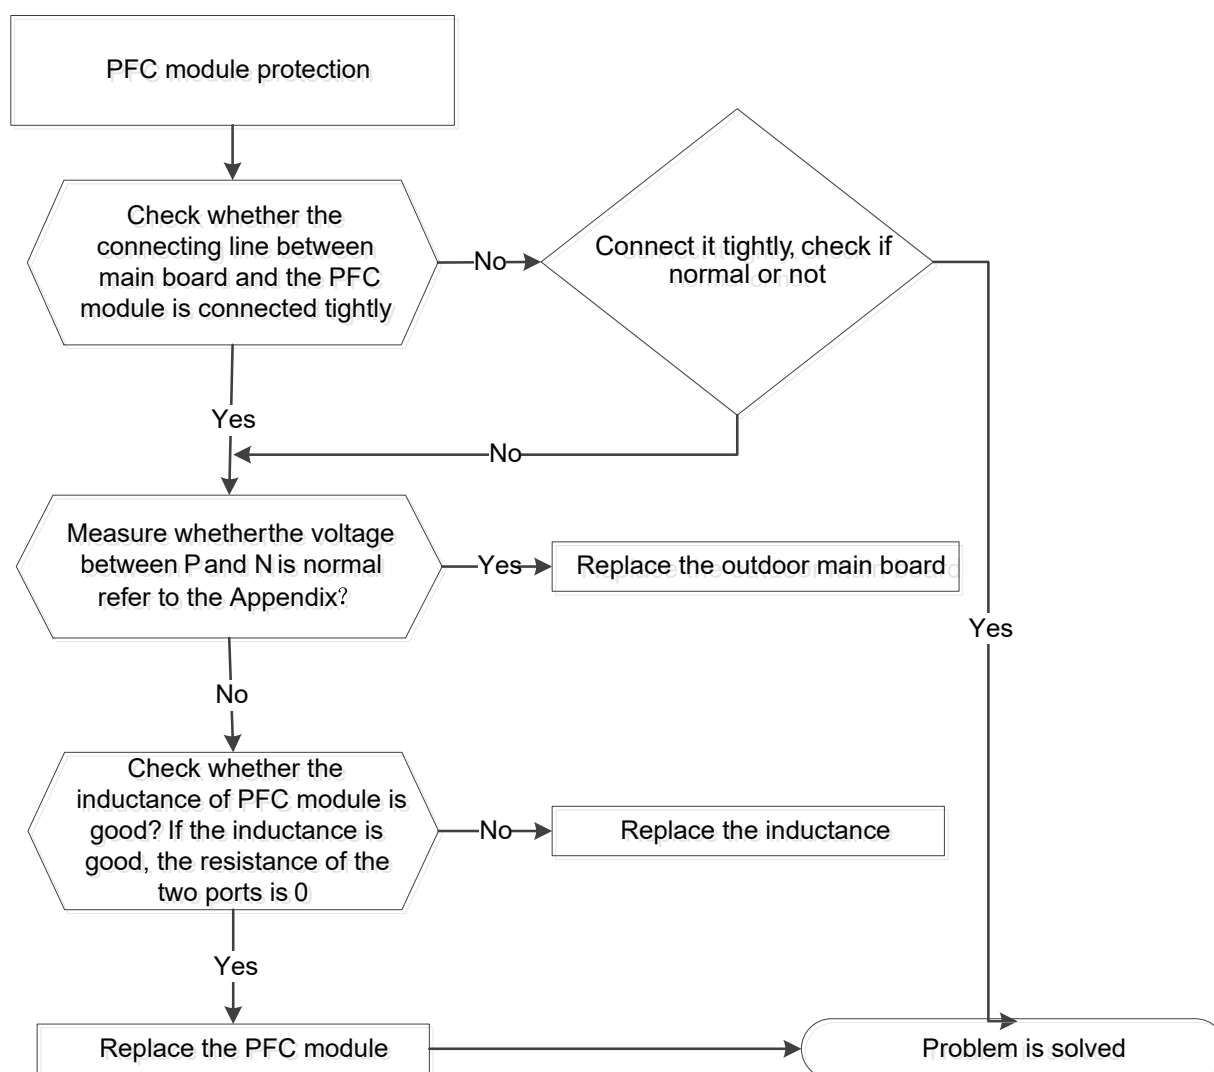


## 8.10 (ODU) PC 06 (Temperature protection of compressor discharge diagnosis and solution)

**Description:** When the compressor discharge temperature (T5) is more than 110°C for 10 seconds, the compressor ceases operation and does not restart until T5 is less than 90°C

### Recommended parts to prepare:

- Connection wires
- Outdoor PCB
- Discharge temperature sensor
- Refrigerant

### Troubleshooting and repair:

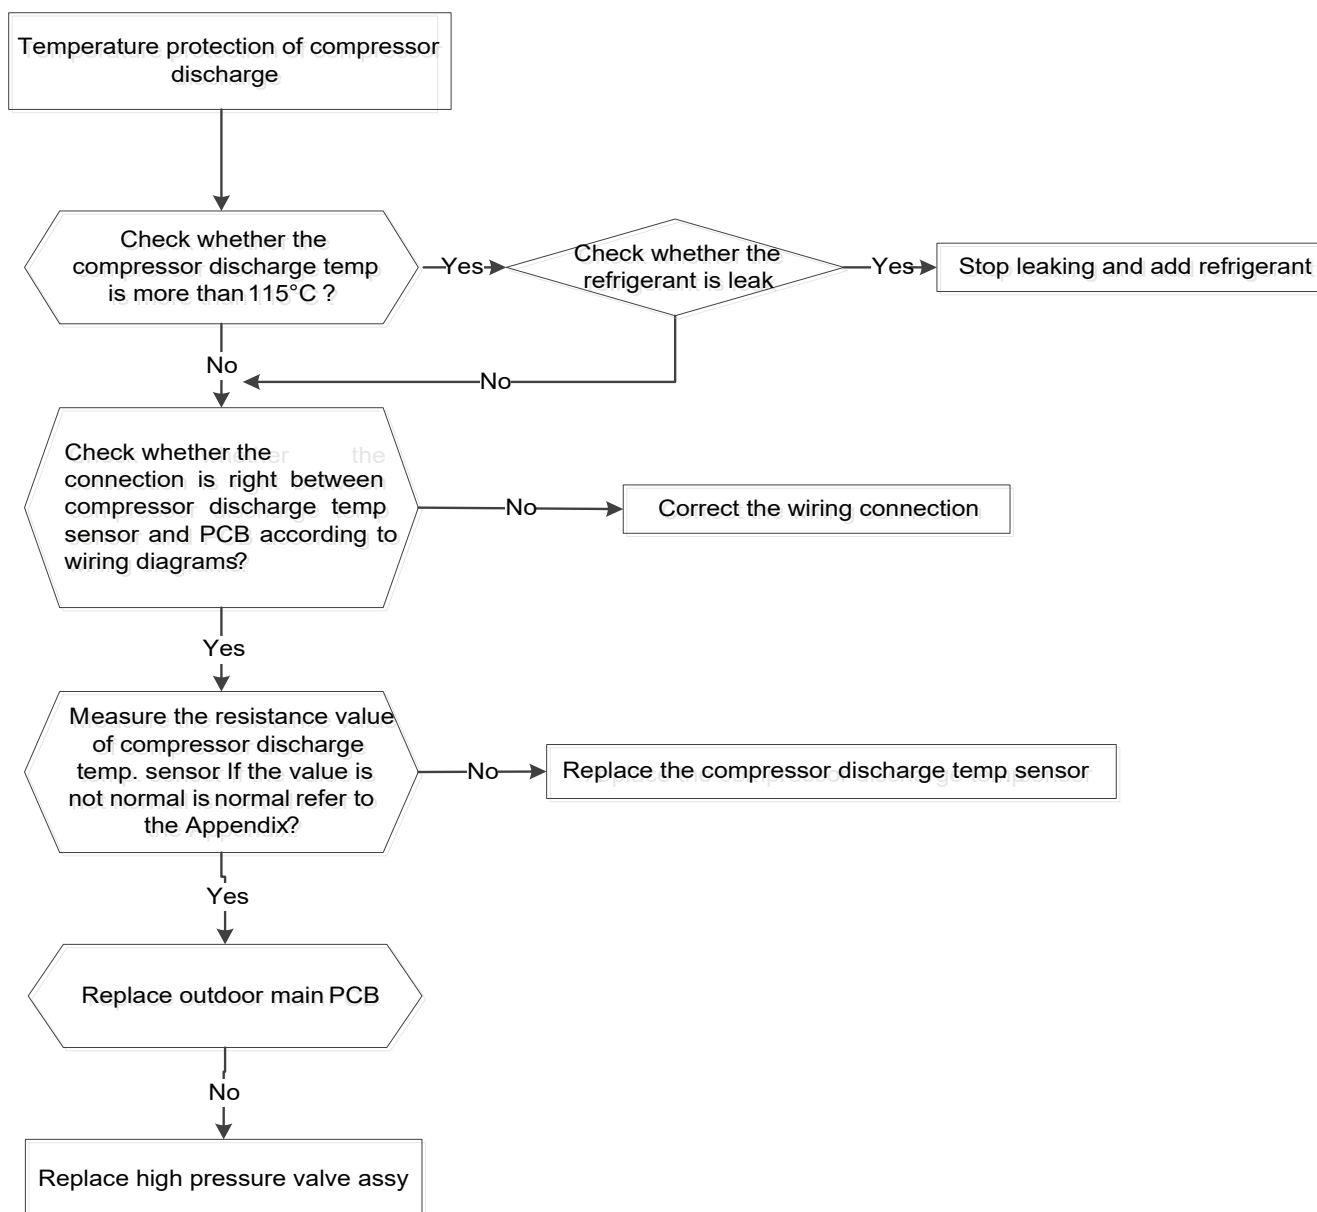

---


## 8.11 (ODU) PC 0A (High temperature protection of condenser diagnosis and solution)

**Description:** The unit will stop when condenser temperature is higher than 65°C, and runs again when it is less than 52°C

**Recommended parts to prepare:**

- Connection wires
- Condenser temperature sensor
- Outdoor fan
- Outdoor main PCB
- Refrigerant

**Troubleshooting and repair:**

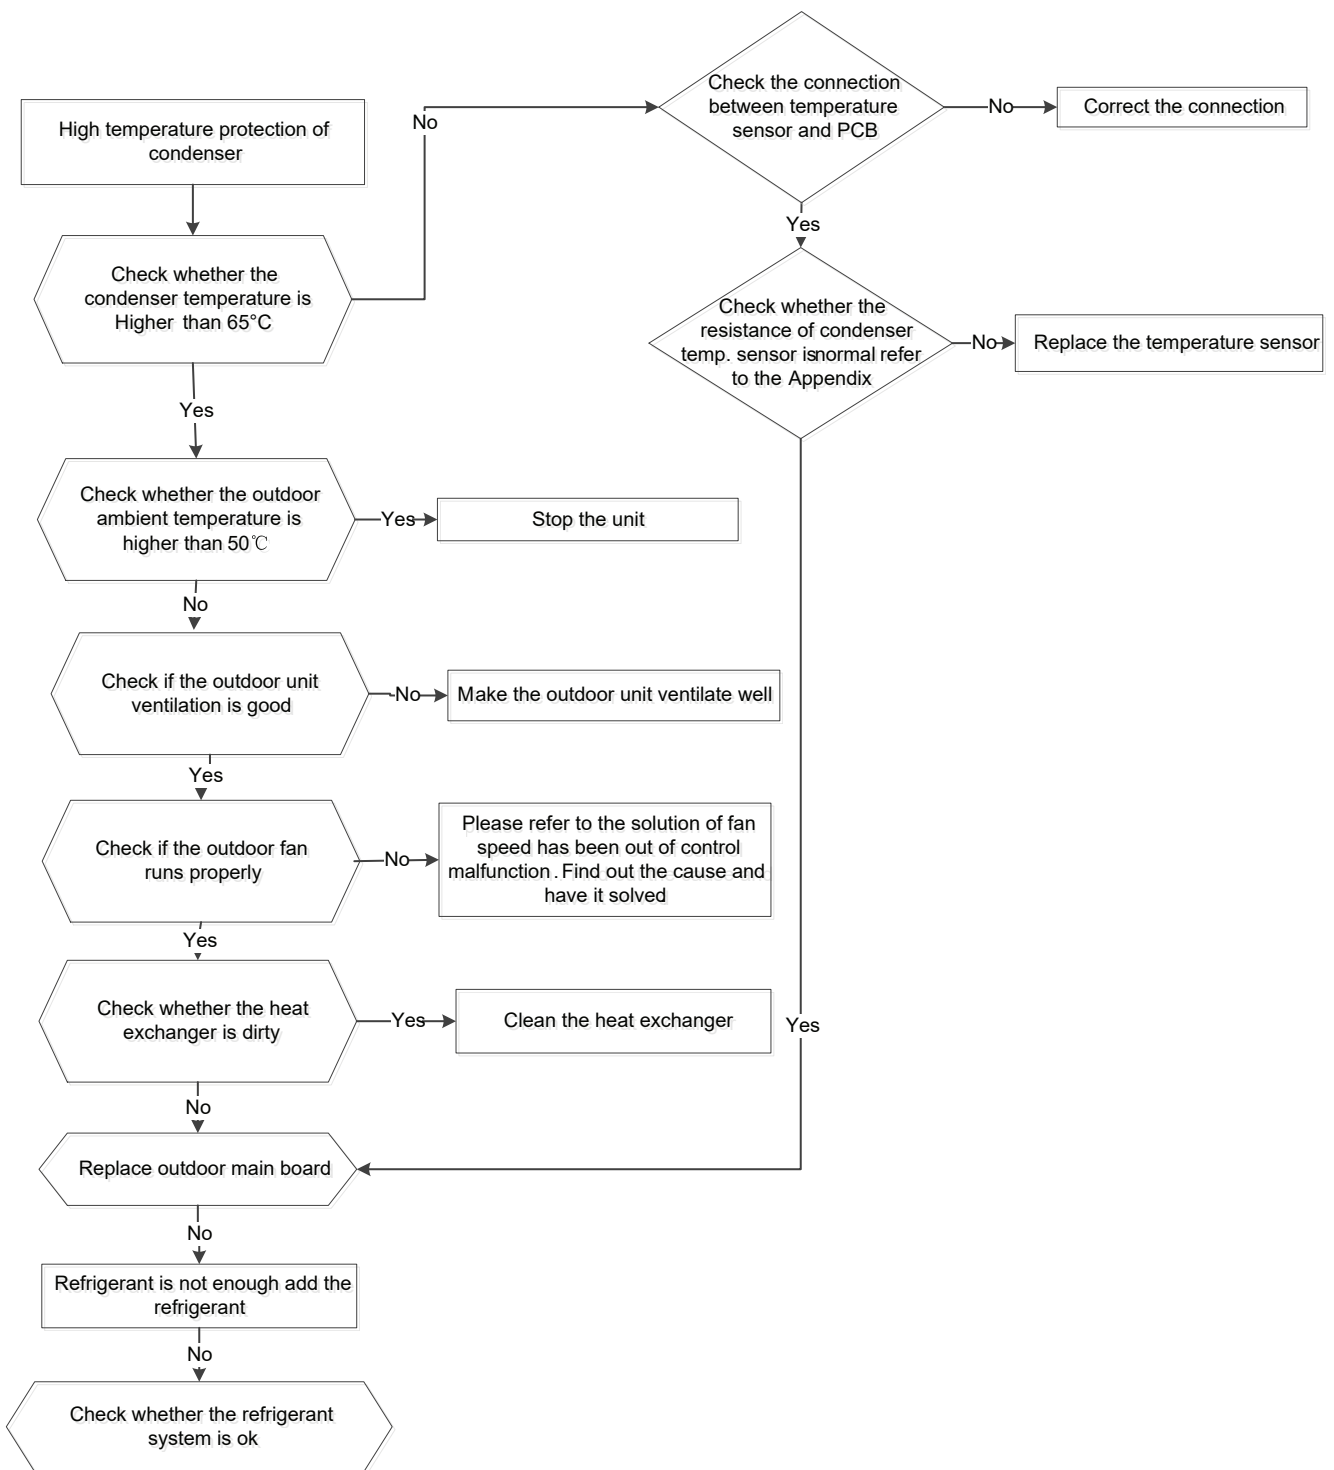

---


## 8.12 EH 02 (Zero crossing detection error diagnosis and solution)

**Description:** When PCB does not receive zero crossing signal feedback for 4 minutes or the zero crossing signal time interval is abnormal.

**Recommended parts to prepare:**

- Connection wires
- Indoor main PCB

**Troubleshooting and repair:**

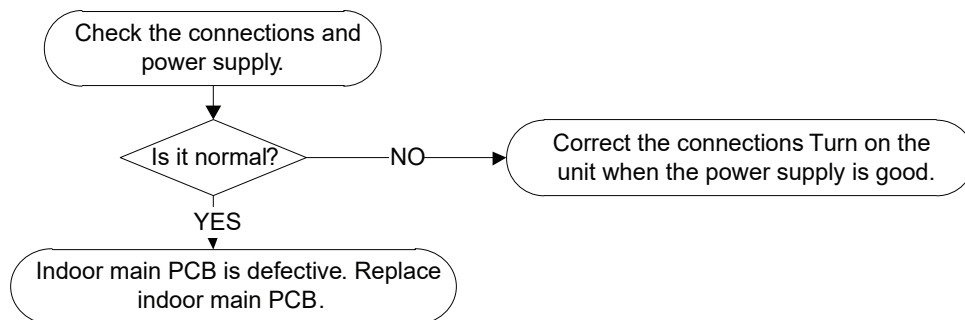


### 8.13 PC 02 (Top temperature protection of compressor diagnosis and solution)

**Description:** If the sampling voltage is not 5V, the LED will display the failure.

**Recommended parts to prepare:**

- Connection wires
- Overload protector
- Outdoor PCB

**Troubleshooting and repair:**

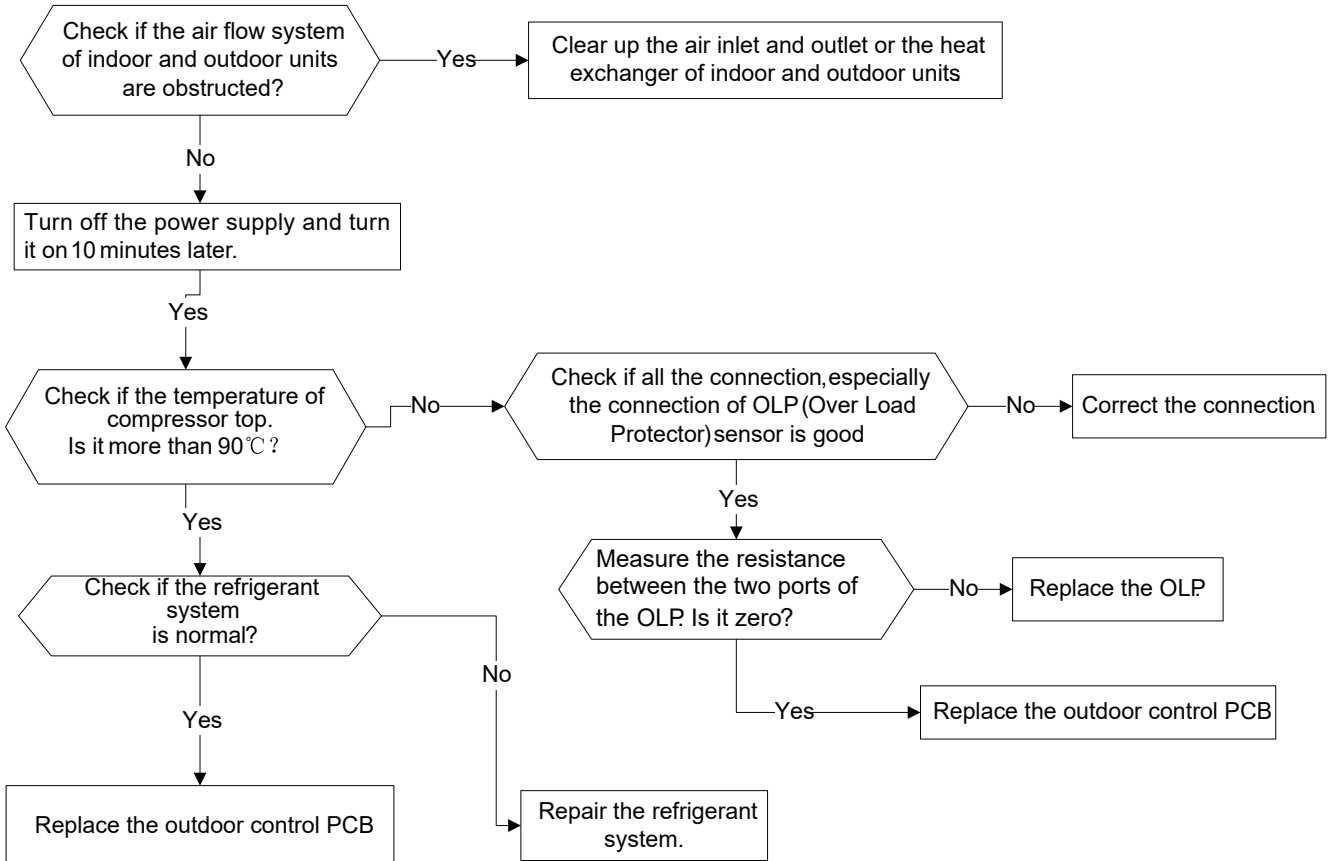

---

## 8.14 (IDU) PC 03 / (ODU) PC 30 (High pressure protection diagnosis and solution)


**Description:** Outdoor pressure switch cut off the system because high pressure is higher than 4.4 MPa

**Recommended parts to prepare:**

- Connection wires
- Pressure switch
- Outdoor fan
- Outdoor main PCB

**Troubleshooting and repair:**



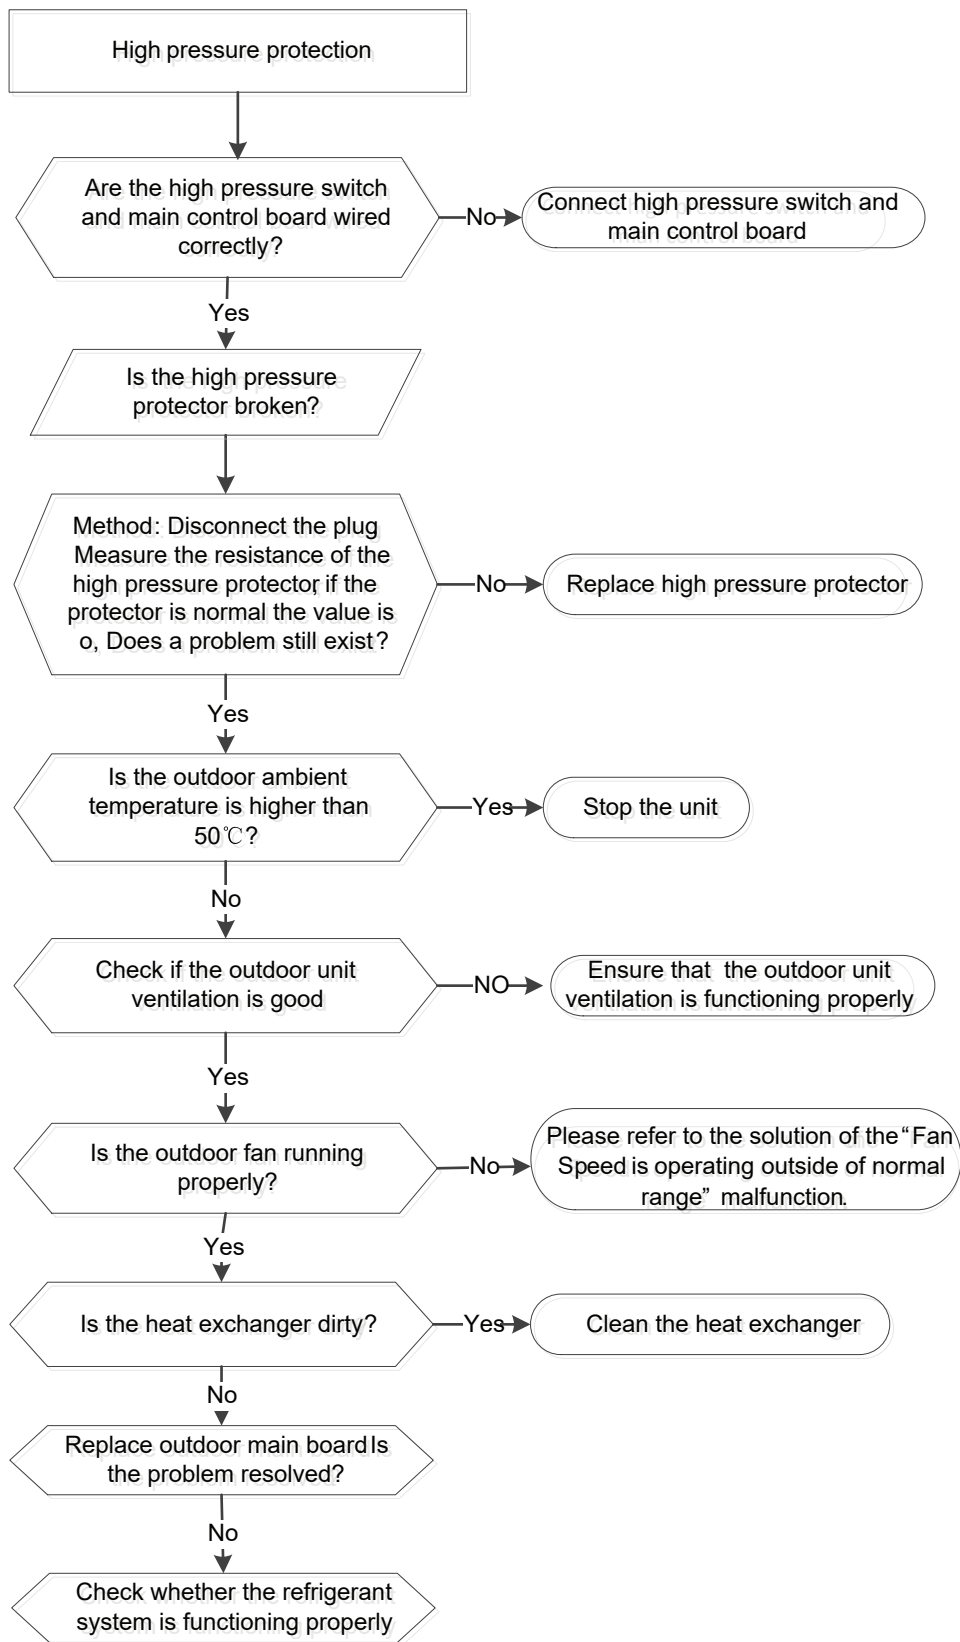

---


## 8.15 (IDU) PC 03 / (ODU) PC 31 (Low pressure protection diagnosis and solution)

**Description:** Outdoor pressure switch cut off the system because low pressure is lower than 0.13 MPa, the LED displays the failure code.

**Recommended parts to prepare:**

- Connection wires
- Outdoor PCB
- Low pressure protector
- Refrigerant

**Troubleshooting and repair:**

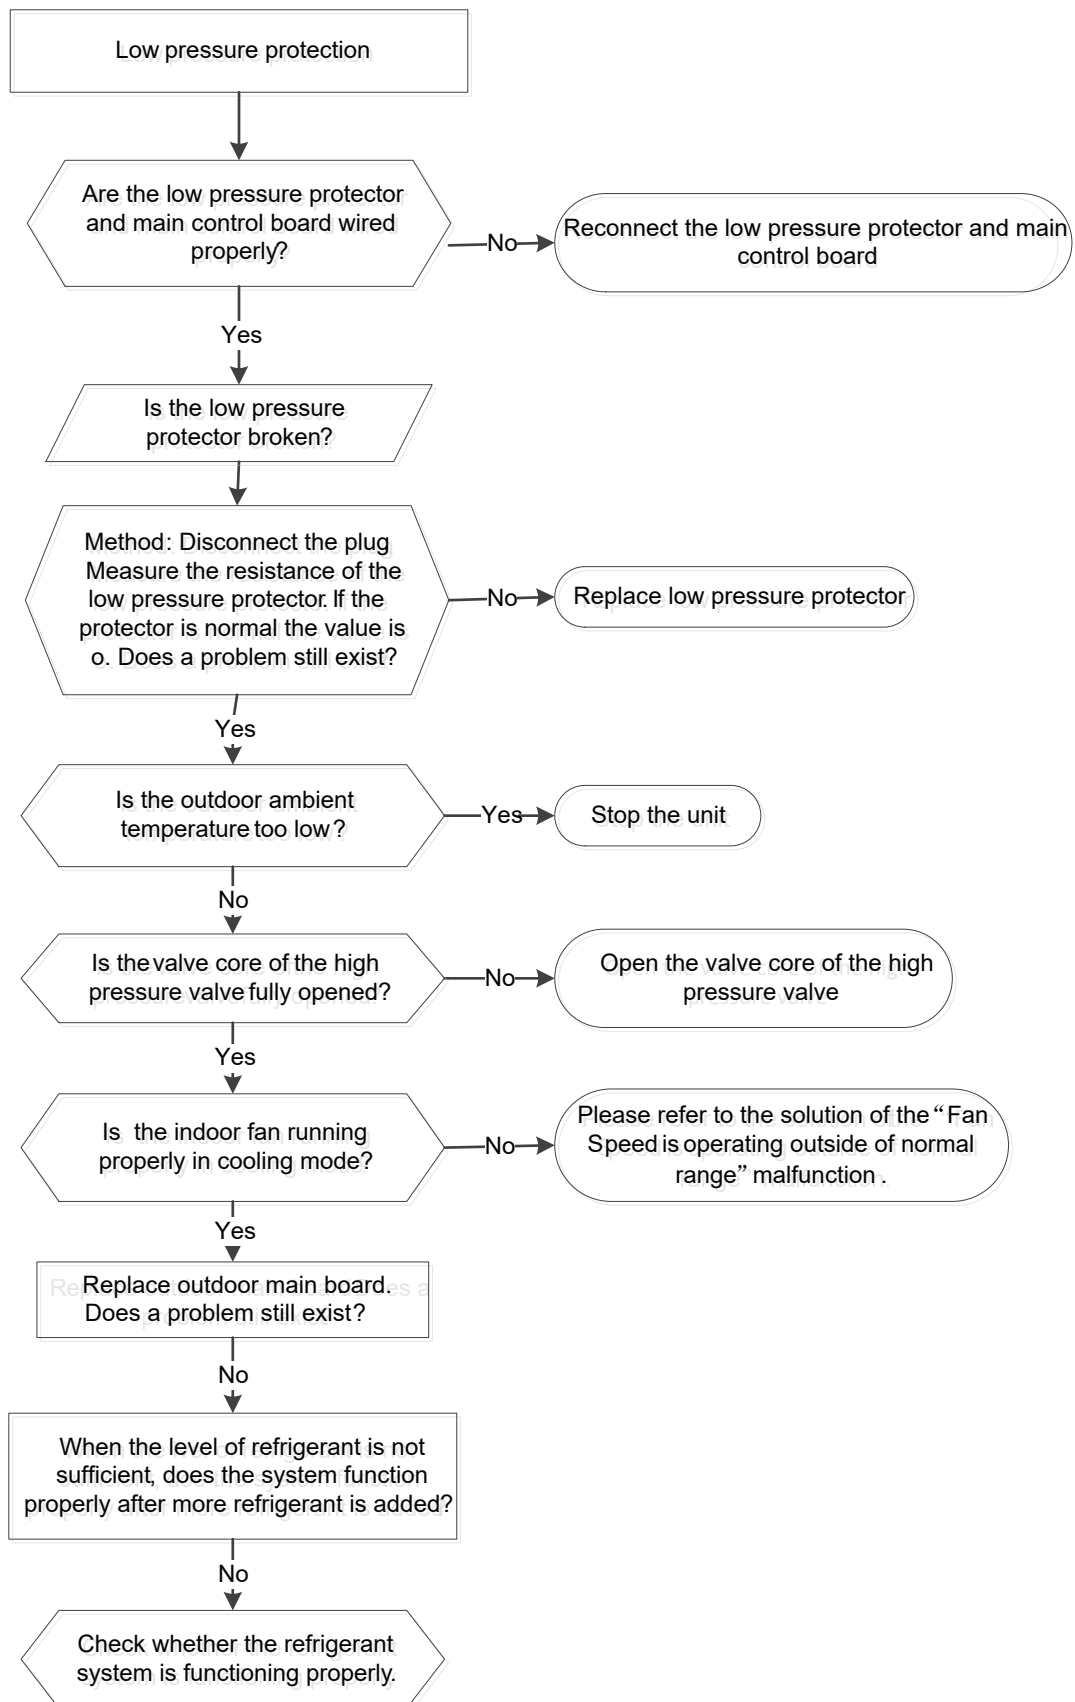

**Note:** For certain models, outdoor PCB could not be removed separately. In this case, the outdoor electric control box should be replaced as a whole.

---


## 8.16 EC 72 (Lack phase failure of outdoor DC fan motor diagnosis and solution)

**Description:** When the three-phase sampling current of the DC motor is abnormal, especially when the current of one or more phases is always small and almost 0, the LED displays the failure code.

### Recommended parts to prepare:

- Connection wire
- Fan motor
- Outdoor PCB

### Troubleshooting and repair:

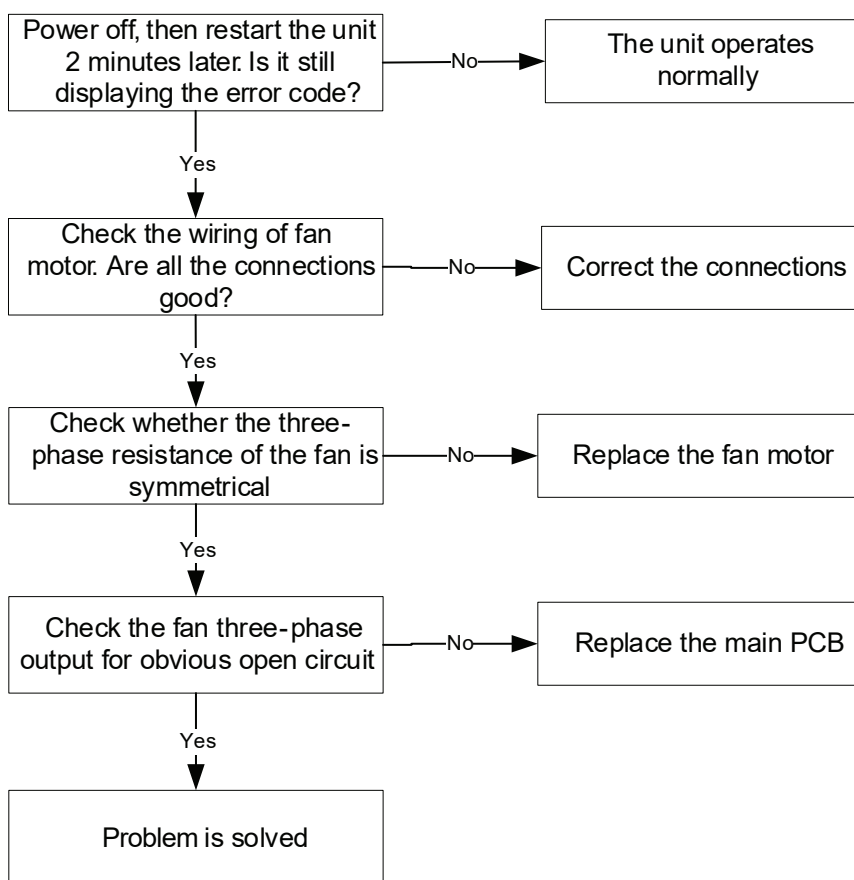

---


## 8.17 PC 43 (Outdoor compressor lack phase protection diagnosis and solution)

**Description:** When the three-phase sampling current of the compressor is abnormal, especially when the current of one or more phases is always small and almost 0, the LED displays the failure code

### Recommended parts to prepare:

- Connection wire
- Compressor
- Outdoor PCB

### Troubleshooting and repair:

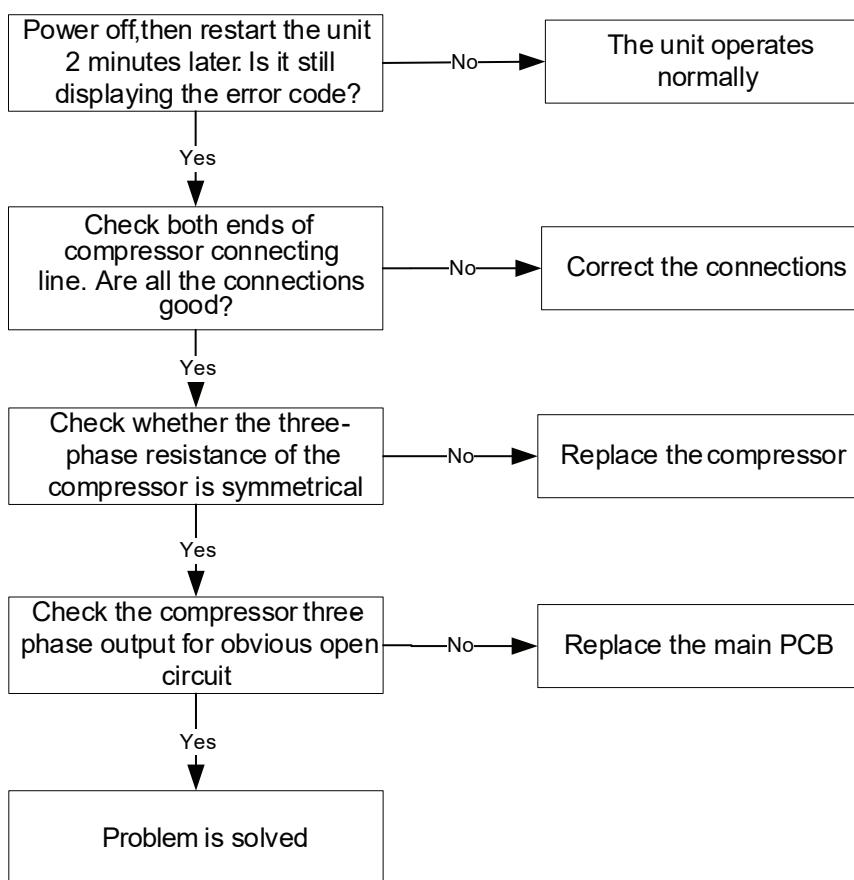

---


## 8.18 PC 45 (Outdoor unit IR chip drive failure diagnosis and solution)

**Description:** When the IR chip detects its own parameter error, the LED displays the failure code when power on.

**Recommended parts to prepare:**

- Inverter module PCB.

**Troubleshooting and repair:**

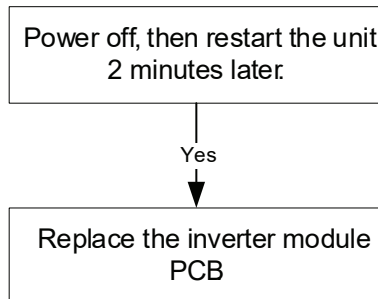

## 8.19 (ODU)CE (Automatic correction of wiring/piping error)

Press the “check switch” on the outdoor unit PCB board 5 seconds until LED display “CE”, which mean this function is working, Approximately 5-10 minutes after the switch is pressed, the “CE” disappear the wiring/piping error will be corrected, and wiring/piping is properly connected.


## 8. Check Procedures

### 8.1 Temperature Sensor Check

#### **!** WARNING

**Be sure to turn off all power supplies or disconnect all wires to avoid electric shock. Operate after compressor and coil have returned to normal temperature in case of injury.**


1. Disconnect the temperature sensor from PCB (Refer to Chapter 5 & 6. Indoor & Outdoor Unit Disassembly).
2. Measure the resistance value of the sensor using a multi-meter.
3. Check corresponding temperature sensor resistance value table (Refer to Chapter 8. Appendix).

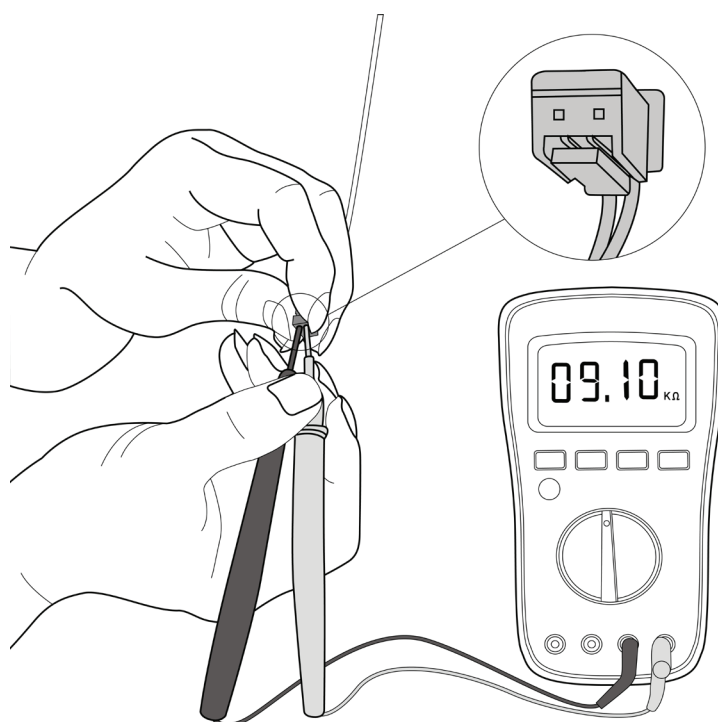

**Note:** The picture and the value are only for reference, actual condition and specific value may vary.

#### 1.1 Compressor Check


1. Disconnect the compressor power cord from outdoor PCB (Refer to Chapter 6. Outdoor Unit Disassembly)).
2. Measure the resistance value of each winding using a multi-meter.
3. Check the resistance value of each winding in the following table.

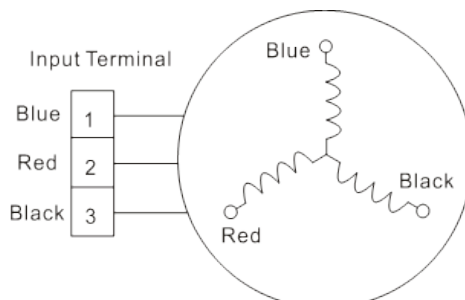

| Resistance Value | KSN133D42UFZ | ATN150D30UFZA | ATF235D22UMT | GKT176MBH | KTM240D57UMT |
|------------------|--------------|---------------|--------------|-----------|--------------|
| Blue-Red         | 1.82Ω        | 1.03Ω         | 0.75Ω        | 1.75Ω     | 0.62Ω        |
| Blue-Black       |              |               |              |           |              |
| Red-Black        |              |               |              |           |              |

| Resistance Value | ATM150D23UFZ | ATF235D22UMT | ATF310D43UMT | ATQ360D1UMU | EAPQ420D1UMUA |
|------------------|--------------|--------------|--------------|-------------|---------------|
| Blue-Red         | 1.72Ω        | 0.75Ω        | 0.65Ω        | 0.37Ω       | 0.37Ω         |
| Blue-Black       |              |              |              |             |               |
| Red-Black        |              |              |              |             |               |

| Resistance Value | ASM135D23UFZ | KTF310D43UMT | KSN140D21UFZ | KTN150D30UFZA | KTM240D57UMT |
|------------------|--------------|--------------|--------------|---------------|--------------|
| Blue-Red         | 1.75Ω        | 0.65Ω        | 1.28Ω        | 1.02Ω         | 0.62Ω        |
| Blue-Black       |              |              |              |               |              |
| Red-Black        |              |              |              |               |              |

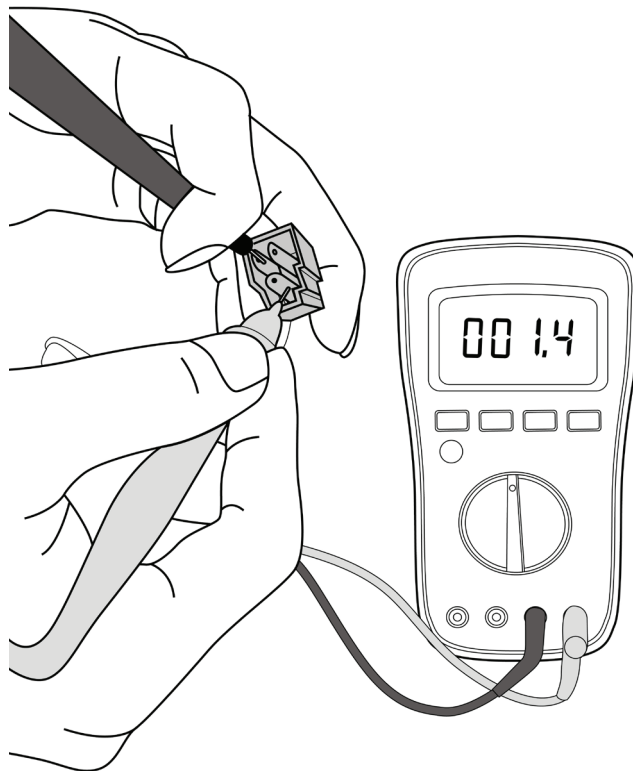

**Note:** The picture and the value are only for reference, actual condition and specific value may vary.




## 1.2 IPM Continuity Check

### **!** WARNING

**Electricity remains in capacitors even when the power supply is off.  
Ensure the capacitors are fully discharged before troubleshooting.**

1. Turn off outdoor unit and disconnect power supply.
2. Discharge electrolytic capacitors and ensure all energy-storage unit has been discharged.
3. Disassemble outdoor PCB or disassemble IPM board.
4. Measure the resistance value between P and U(V, W, N); U(V, W) and N.

| Digital tester |          | Resistance value  | Digital tester |          | Resistance value  |
|----------------|----------|-------------------|----------------|----------|-------------------|
| (+)Red         | (-)Black |                   | (+)Red         | (-)Black |                   |
| P              | N        | ∞<br>(Several MΩ) | U              | N        | ∞<br>(Several MΩ) |
|                | U        |                   | V              |          |                   |
|                | V        |                   | W              |          |                   |
|                | W        |                   | -              |          |                   |

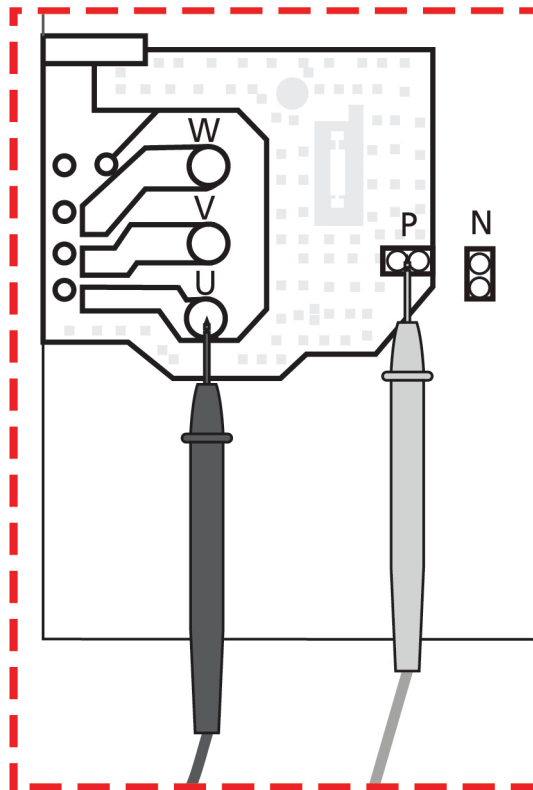


**Note:** The picture and the value are only for reference, actual condition and specific value may vary.

### Normal voltage of P and N

|                           |                                |                              |         |
|---------------------------|--------------------------------|------------------------------|---------|
| 208-240V(1-phase,3-phase) |                                | 380-415V(3-phase)            |         |
| In standby                |                                |                              |         |
| around 310VDC             |                                | around 530VDC                |         |
| In operation              |                                |                              |         |
| With passive PFC module   | With partial active PFC module | With fully active PFC module | /       |
| >200VDC                   | >310VDC                        | >370VDC                      | >450VDC |

### 1.3 Reactor Check

Measure the resistance and voltage (to ground) of the reactor. The normal resistance should be around 0.1 ohm. Otherwise, the reactor must have malfunction.

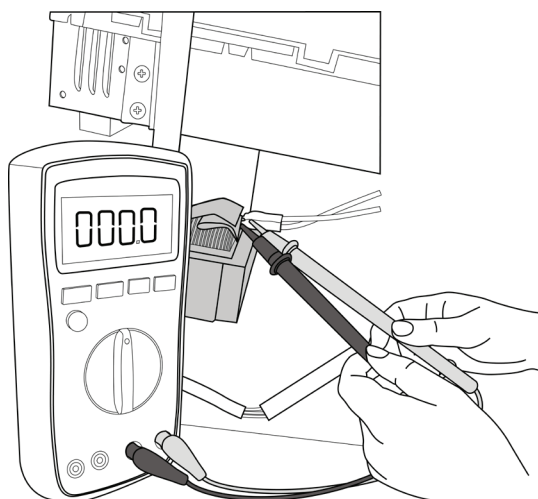

### 1.4 4-way valve Check


1. Power on, use a digital tester to measure the voltage, when the unit operates in cooling, it is 0V. When the unit operates in heating, it is about equal to power supply voltage.

If the value of the voltage is not in the range, the PCB must have problems and need to be replaced.

2. Turn off the power, use a digital tester to measure the resistance. The value should be 1.8~2.5 KΩ.

---

## 1.5 EXV Check

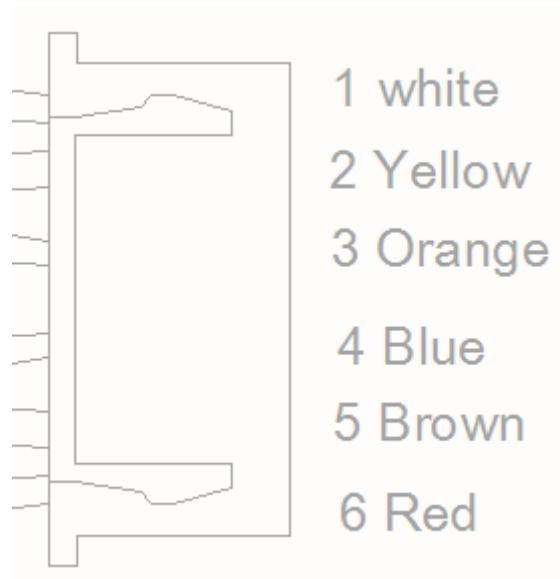

1. Turn off outdoor unit and disconnect power supply.
2. Disconnect the connectors of EXV.
3. Measure the resistance value between Red and Blue(Yellow); Brown and Orange(White).

### Resistance to EXV coil

| Color of lead wire | Normal Value |
|--------------------|--------------|
| Red- Blue          | About 50Ω    |
| Red - Yellow       |              |
| Brown-Orange       |              |
| Brown-White        |              |

---

# Appendix

## Contents

|      |   |   |
|------|---|---|
| i)   | Temperature Sensor Resistance Value Table for T1, T2, T3, and T4 (°C – K) ..... | 2 |
| ii)  | Temperature Sensor Resistance Value Table for TP (for some units)(°C --K) ..... | 3 |
| iii) | Pressure On Service Port .....  | 4 |

**i) Temperature Sensor Resistance Value Table for T1,T2,T3 and T4 (°C – K)**

| °C  | °F | K Ohm   | °C | °F  | K Ohm   | °C | °F  | K Ohm   | °C  | °F  | K Ohm   |
|-----|----|---------|----|-----|---------|----|-----|---------|-----|-----|---------|
| -20 | -4 | 115.266 | 20 | 68  | 12.6431 | 60 | 140 | 2.35774 | 100 | 212 | 0.62973 |
| -19 | -2 | 108.146 | 21 | 70  | 12.0561 | 61 | 142 | 2.27249 | 101 | 214 | 0.61148 |
| -18 | 0  | 101.517 | 22 | 72  | 11.5    | 62 | 144 | 2.19073 | 102 | 216 | 0.59386 |
| -17 | 1  | 96.3423 | 23 | 73  | 10.9731 | 63 | 145 | 2.11241 | 103 | 217 | 0.57683 |
| -16 | 3  | 89.5865 | 24 | 75  | 10.4736 | 64 | 147 | 2.03732 | 104 | 219 | 0.56038 |
| -15 | 5  | 84.219  | 25 | 77  | 10      | 65 | 149 | 1.96532 | 105 | 221 | 0.54448 |
| -14 | 7  | 79.311  | 26 | 79  | 9.55074 | 66 | 151 | 1.89627 | 106 | 223 | 0.52912 |
| -13 | 9  | 74.536  | 27 | 81  | 9.12445 | 67 | 153 | 1.83003 | 107 | 225 | 0.51426 |
| -12 | 10 | 70.1698 | 28 | 82  | 8.71983 | 68 | 154 | 1.76647 | 108 | 226 | 0.49989 |
| -11 | 12 | 66.0898 | 29 | 84  | 8.33566 | 69 | 156 | 1.70547 | 109 | 228 | 0.486   |
| -10 | 14 | 62.2756 | 30 | 86  | 7.97078 | 70 | 158 | 1.64691 | 110 | 230 | 0.47256 |
| -9  | 16 | 58.7079 | 31 | 88  | 7.62411 | 71 | 160 | 1.59068 | 111 | 232 | 0.45957 |
| -8  | 18 | 56.3694 | 32 | 90  | 7.29464 | 72 | 162 | 1.53668 | 112 | 234 | 0.44699 |
| -7  | 19 | 52.2438 | 33 | 91  | 6.98142 | 73 | 163 | 1.48481 | 113 | 235 | 0.43482 |
| -6  | 21 | 49.3161 | 34 | 93  | 6.68355 | 74 | 165 | 1.43498 | 114 | 237 | 0.42304 |
| -5  | 23 | 46.5725 | 35 | 95  | 6.40021 | 75 | 167 | 1.38703 | 115 | 239 | 0.41164 |
| -4  | 25 | 44      | 36 | 97  | 6.13059 | 76 | 169 | 1.34105 | 116 | 241 | 0.4006  |
| -3  | 27 | 41.5878 | 37 | 99  | 5.87359 | 77 | 171 | 1.29078 | 117 | 243 | 0.38991 |
| -2  | 28 | 39.8239 | 38 | 100 | 5.62961 | 78 | 172 | 1.25423 | 118 | 244 | 0.37956 |
| -1  | 30 | 37.1988 | 39 | 102 | 5.39689 | 79 | 174 | 1.2133  | 119 | 246 | 0.36954 |
| 0   | 32 | 35.2024 | 40 | 104 | 5.17519 | 80 | 176 | 1.17393 | 120 | 248 | 0.35982 |
| 1   | 34 | 33.3269 | 41 | 106 | 4.96392 | 81 | 178 | 1.13604 | 121 | 250 | 0.35042 |
| 2   | 36 | 31.5635 | 42 | 108 | 4.76253 | 82 | 180 | 1.09958 | 122 | 252 | 0.3413  |
| 3   | 37 | 29.9058 | 43 | 109 | 4.5705  | 83 | 181 | 1.06448 | 123 | 253 | 0.33246 |
| 4   | 39 | 28.3459 | 44 | 111 | 4.38736 | 84 | 183 | 1.03069 | 124 | 255 | 0.3239  |
| 5   | 41 | 26.8778 | 45 | 113 | 4.21263 | 85 | 185 | 0.99815 | 125 | 257 | 0.31559 |
| 6   | 43 | 25.4954 | 46 | 115 | 4.04589 | 86 | 187 | 0.96681 | 126 | 259 | 0.30754 |
| 7   | 45 | 24.1932 | 47 | 117 | 3.88673 | 87 | 189 | 0.93662 | 127 | 261 | 0.29974 |
| 8   | 46 | 22.5662 | 48 | 118 | 3.73476 | 88 | 190 | 0.90753 | 128 | 262 | 0.29216 |
| 9   | 48 | 21.8094 | 49 | 120 | 3.58962 | 89 | 192 | 0.8795  | 129 | 264 | 0.28482 |
| 10  | 50 | 20.7184 | 50 | 122 | 3.45097 | 90 | 194 | 0.85248 | 130 | 266 | 0.2777  |
| 11  | 52 | 19.6891 | 51 | 124 | 3.31847 | 91 | 196 | 0.82643 | 131 | 268 | 0.27078 |
| 12  | 54 | 18.7177 | 52 | 126 | 3.19183 | 92 | 198 | 0.80132 | 132 | 270 | 0.26408 |
| 13  | 55 | 17.8005 | 53 | 127 | 3.07075 | 93 | 199 | 0.77709 | 133 | 271 | 0.25757 |
| 14  | 57 | 16.9341 | 54 | 129 | 2.95896 | 94 | 201 | 0.75373 | 134 | 273 | 0.25125 |
| 15  | 59 | 16.1156 | 55 | 131 | 2.84421 | 95 | 203 | 0.73119 | 135 | 275 | 0.24512 |
| 16  | 61 | 15.3418 | 56 | 133 | 2.73823 | 96 | 205 | 0.70944 | 136 | 277 | 0.23916 |
| 17  | 63 | 14.6181 | 57 | 135 | 2.63682 | 97 | 207 | 0.68844 | 137 | 279 | 0.23338 |
| 18  | 64 | 13.918  | 58 | 136 | 2.53973 | 98 | 208 | 0.66818 | 138 | 280 | 0.22776 |
| 19  | 66 | 13.2631 | 59 | 138 | 2.44677 | 99 | 210 | 0.64862 | 139 | 282 | 0.22231 |


**ii) Temperature Sensor Resistance Value Table for TP(for some units) (°C --K)**

| °C  | °F | K Ohm | °C | °F  | K Ohm | °C | °F  | K Ohm | °C  | °F  | K Ohm |
|-----|----|-------|----|-----|-------|----|-----|-------|-----|-----|-------|
| °C  | °F | K Ohm | °C | °F  | K Ohm | °C | °F  | K Ohm | °C  | °F  | K Ohm |
| -20 | -4 | 542.7 | 20 | 68  | 68.66 | 60 | 140 | 13.59 | 100 | 212 | 3.702 |
| -19 | -2 | 511.9 | 21 | 70  | 65.62 | 61 | 142 | 13.11 | 101 | 214 | 3.595 |
| -18 | 0  | 483   | 22 | 72  | 62.73 | 62 | 144 | 12.65 | 102 | 216 | 3.492 |
| -17 | 1  | 455.9 | 23 | 73  | 59.98 | 63 | 145 | 12.21 | 103 | 217 | 3.392 |
| -16 | 3  | 430.5 | 24 | 75  | 57.37 | 64 | 147 | 11.79 | 104 | 219 | 3.296 |
| -15 | 5  | 406.7 | 25 | 77  | 54.89 | 65 | 149 | 11.38 | 105 | 221 | 3.203 |
| -14 | 7  | 384.3 | 26 | 79  | 52.53 | 66 | 151 | 10.99 | 106 | 223 | 3.113 |
| -13 | 9  | 363.3 | 27 | 81  | 50.28 | 67 | 153 | 10.61 | 107 | 225 | 3.025 |
| -12 | 10 | 343.6 | 28 | 82  | 48.14 | 68 | 154 | 10.25 | 108 | 226 | 2.941 |
| -11 | 12 | 325.1 | 29 | 84  | 46.11 | 69 | 156 | 9.902 | 109 | 228 | 2.86  |
| -10 | 14 | 307.7 | 30 | 86  | 44.17 | 70 | 158 | 9.569 | 110 | 230 | 2.781 |
| -9  | 16 | 291.3 | 31 | 88  | 42.33 | 71 | 160 | 9.248 | 111 | 232 | 2.704 |
| -8  | 18 | 275.9 | 32 | 90  | 40.57 | 72 | 162 | 8.94  | 112 | 234 | 2.63  |
| -7  | 19 | 261.4 | 33 | 91  | 38.89 | 73 | 163 | 8.643 | 113 | 235 | 2.559 |
| -6  | 21 | 247.8 | 34 | 93  | 37.3  | 74 | 165 | 8.358 | 114 | 237 | 2.489 |
| -5  | 23 | 234.9 | 35 | 95  | 35.78 | 75 | 167 | 8.084 | 115 | 239 | 2.422 |
| -4  | 25 | 222.8 | 36 | 97  | 34.32 | 76 | 169 | 7.82  | 116 | 241 | 2.357 |
| -3  | 27 | 211.4 | 37 | 99  | 32.94 | 77 | 171 | 7.566 | 117 | 243 | 2.294 |
| -2  | 28 | 200.7 | 38 | 100 | 31.62 | 78 | 172 | 7.321 | 118 | 244 | 2.233 |
| -1  | 30 | 190.5 | 39 | 102 | 30.36 | 79 | 174 | 7.086 | 119 | 246 | 2.174 |
| 0   | 32 | 180.9 | 40 | 104 | 29.15 | 80 | 176 | 6.859 | 120 | 248 | 2.117 |
| 1   | 34 | 171.9 | 41 | 106 | 28    | 81 | 178 | 6.641 | 121 | 250 | 2.061 |
| 2   | 36 | 163.3 | 42 | 108 | 26.9  | 82 | 180 | 6.43  | 122 | 252 | 2.007 |
| 3   | 37 | 155.2 | 43 | 109 | 25.86 | 83 | 181 | 6.228 | 123 | 253 | 1.955 |
| 4   | 39 | 147.6 | 44 | 111 | 24.85 | 84 | 183 | 6.033 | 124 | 255 | 1.905 |
| 5   | 41 | 140.4 | 45 | 113 | 23.89 | 85 | 185 | 5.844 | 125 | 257 | 1.856 |
| 6   | 43 | 133.5 | 46 | 115 | 22.89 | 86 | 187 | 5.663 | 126 | 259 | 1.808 |
| 7   | 45 | 127.1 | 47 | 117 | 22.1  | 87 | 189 | 5.488 | 127 | 261 | 1.762 |
| 8   | 46 | 121   | 48 | 118 | 21.26 | 88 | 190 | 5.32  | 128 | 262 | 1.717 |
| 9   | 48 | 115.2 | 49 | 120 | 20.46 | 89 | 192 | 5.157 | 129 | 264 | 1.674 |
| 10  | 50 | 109.8 | 50 | 122 | 19.69 | 90 | 194 | 5     | 130 | 266 | 1.632 |
| 11  | 52 | 104.6 | 51 | 124 | 18.96 | 91 | 196 | 4.849 |     |     |       |
| 12  | 54 | 99.69 | 52 | 126 | 18.26 | 92 | 198 | 4.703 |     |     |       |
| 13  | 55 | 95.05 | 53 | 127 | 17.58 | 93 | 199 | 4.562 |     |     |       |
| 14  | 57 | 90.66 | 54 | 129 | 16.94 | 94 | 201 | 4.426 |     |     |       |
| 15  | 59 | 86.49 | 55 | 131 | 16.32 | 95 | 203 | 4.294 |     |     |       |
| 16  | 61 | 82.54 | 56 | 133 | 15.73 | 96 | 205 | 4.167 |     |     |       |
| 17  | 63 | 78.79 | 57 | 135 | 15.16 | 97 | 207 | 4.045 |     |     |       |
| 18  | 64 | 75.24 | 58 | 136 | 14.62 | 98 | 208 | 3.927 |     |     |       |
| 19  | 66 | 71.86 | 59 | 138 | 14.09 | 99 | 210 | 3.812 |     |     |       |

### iii) Pressure On Service Port


#### Cooling chart(R410A):

| °F(°C) | ODU(DB)             |  | 0(-17) | 5(-15) | 15<br>(-9.44) | 45<br>(7.22) | 75<br>(23.89) | 85<br>(29.44) | 95 (35) | 105<br>(40.56) | 115<br>(46.11) | 120<br>(48.89) |
|--------|---------------------|--|--------|--------|---------------|--------------|---------------|---------------|---------|----------------|----------------|----------------|
|        | IDU(DB/WB)          |  |        |        |               |              |               |               |         |                |                |                |
| BAR    | 70/59 (21.11/15)    |  | 6.4    | 6.5    | 7.3           | 8.0          | 8.2           | 7.8           | 8.1     | 8.6            | 10.1           | 10.6           |
|        | 75/63 (23.89/17.22) |  | 6.7    | 6.8    | 7.9           | 8.6          | 8.6           | 8.3           | 8.7     | 9.1            | 10.7           | 11.2           |
|        | 80/67 (26.67/19.44) |  | 7.1    | 7.2    | 8.5           | 9.5          | 9.3           | 8.9           | 9.1     | 9.6            | 11.2           | 11.9           |
|        | 90/73 (32.22/22.78) |  | 7.7    | 7.8    | 9.6           | 10.5         | 10.3          | 9.5           | 10.0    | 10.6           | 12.4           | 13.0           |
| PSI    | 70/59 (21.11/15)    |  | 93     | 94     | 106           | 116          | 119           | 113           | 117     | 125            | 147            | 154            |
|        | 75/63 (23.89/17.22) |  | 97     | 99     | 115           | 125          | 124           | 120           | 126     | 132            | 155            | 162            |
|        | 80/67 (26.67/19.44) |  | 103    | 104    | 123           | 138          | 135           | 129           | 132     | 140            | 162            | 173            |
|        | 90/73 (32.22/22.78) |  | 112    | 113    | 139           | 152          | 149           | 138           | 145     | 154            | 180            | 189            |
| MPa    | 70/59 (21.11/15)    |  | 0.64   | 0.65   | 0.73          | 0.8          | 0.82          | 0.78          | 0.81    | 0.86           | 1.01           | 1.06           |
|        | 75/63 (23.89/17.22) |  | 0.67   | 0.68   | 0.79          | 0.86         | 0.86          | 0.83          | 0.87    | 0.91           | 1.07           | 1.12           |
|        | 80/67 (26.67/19.44) |  | 0.71   | 0.72   | 0.85          | 0.95         | 0.93          | 0.89          | 0.91    | 0.96           | 1.12           | 1.19           |
|        | 90/73 (32.22/22.78) |  | 0.77   | 0.78   | 0.96          | 1.05         | 1.03          | 0.95          | 1       | 1.06           | 1.24           | 1.3            |

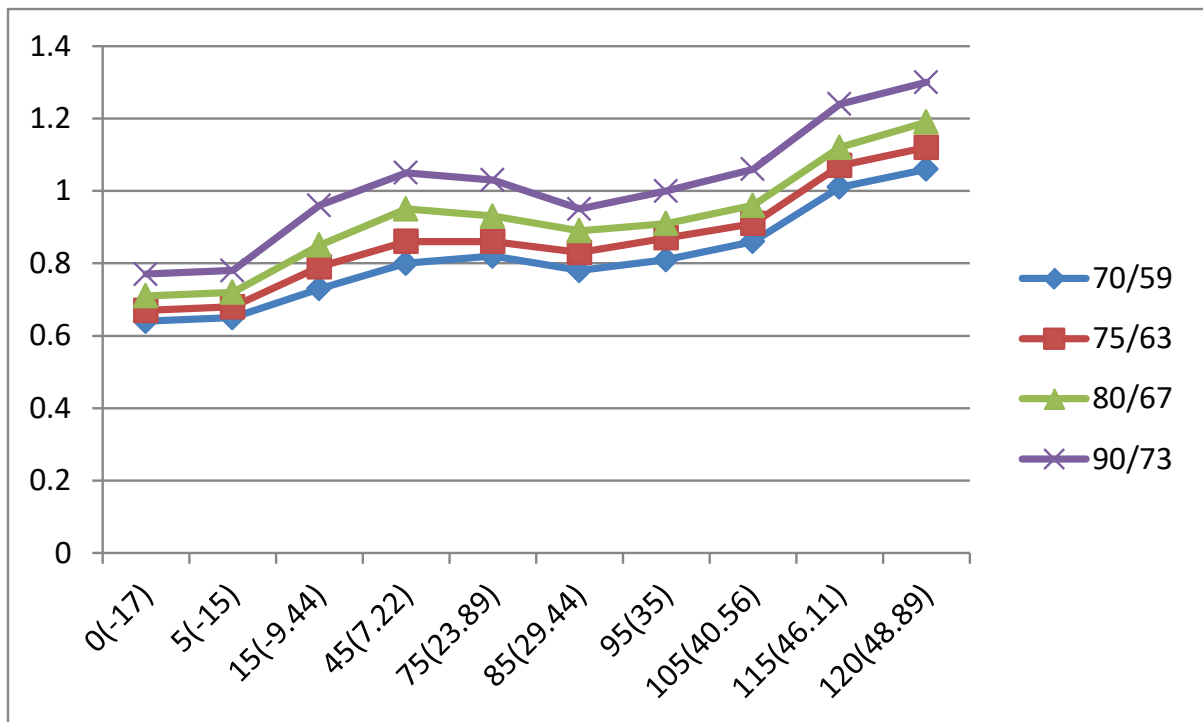

**Heating chart(R410A):**


| °F(°C) | ODU(DB/WB) | 57/53<br>(13.89/11.67) | 47/43<br>(8.33/6.11) | 37/33<br>(2.78/0.56) | 27/23<br>(-2.78/-5) | 17/13 (-8.33/<br>-10.56) | 0/-2<br>(-17/-19) | -17/-18<br>(-27/-28) |
|--------|------------|------------------------|----------------------|----------------------|---------------------|--------------------------|-------------------|----------------------|
|        | IDU(DB)    |                        |                      |                      |                     |                          |                   |                      |
| BAR    | 55(12.78)  | 30.3                   | 28.5                 | 25.3                 | 22.8                | 20.8                     | 18.5              | 16.5                 |
|        | 65(18.33)  | 32.5                   | 30.0                 | 26.6                 | 25.4                | 23.3                     | 20.5              | 19.0                 |
|        | 75(23.89)  | 33.8                   | 31.5                 | 27.8                 | 26.3                | 24.9                     | 21.5              | 20.0                 |
| PSI    | 55(12.78)  | 439                    | 413                  | 367                  | 330                 | 302                      | 268               | 239                  |
|        | 65(18.33)  | 471                    | 435                  | 386                  | 368                 | 339                      | 297               | 276                  |
|        | 75(23.89)  | 489                    | 457                  | 403                  | 381                 | 362                      | 312               | 290                  |
| MPa    | 55(12.78)  | 3.03                   | 2.85                 | 2.53                 | 2.28                | 2.08                     | 1.85              | 1.65                 |
|        | 65(18.33)  | 3.25                   | 3.00                 | 2.66                 | 2.54                | 2.33                     | 2.05              | 1.90                 |
|        | 75(23.89)  | 3.38                   | 3.15                 | 2.78                 | 2.63                | 2.49                     | 2.15              | 2.00                 |

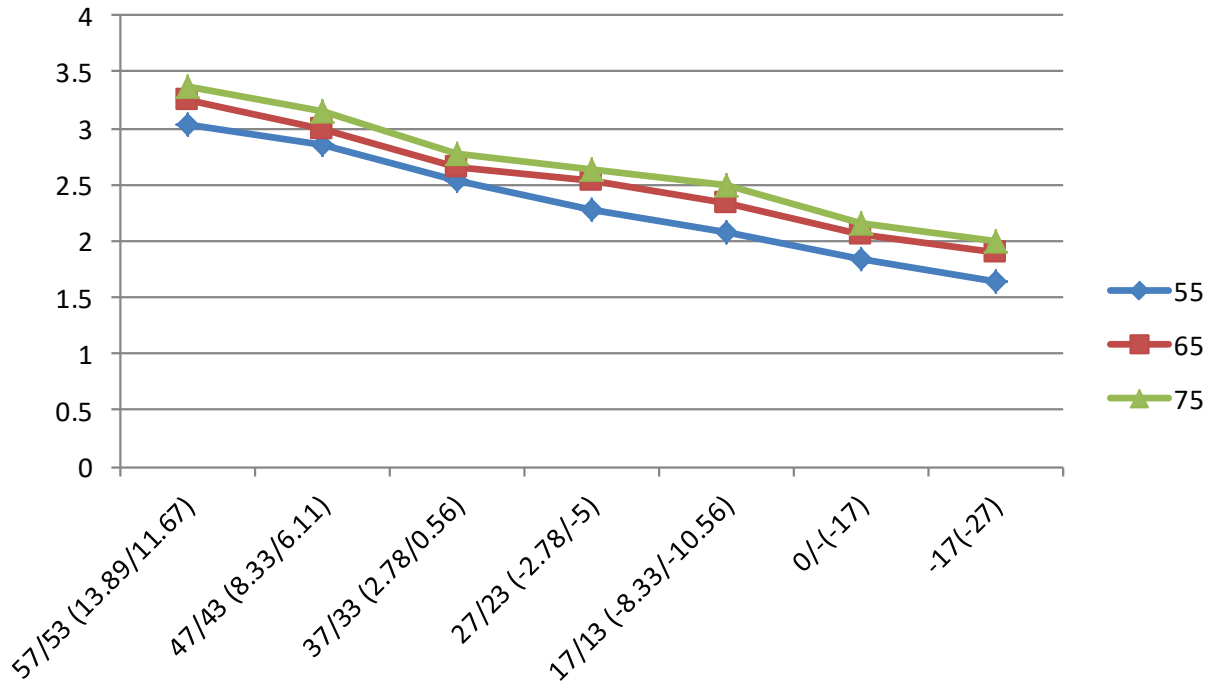




**Cooling chart(R22):**

| °F(°C) | ODU(DB)             |  | 0(-17) | 5(-15) | 15(-9.44) | 45(7.22) | 75(23.89) | 85(29.44) | 95(35) | 105(40.56) | 115(46.11) | 120(48.89) |
|--------|---------------------|--|--------|--------|-----------|----------|-----------|-----------|--------|------------|------------|------------|
|        | IDU(DB/WB)          |  |        |        |           |          |           |           |        |            |            |            |
| BAR    | 70/59 (21.11/15)    |  | 4.0    | 4.1    | 4.6       | 5.0      | 5.1       | 4.9       | 5.1    | 5.4        | 6.3        | 6.6        |
|        | 75/63 (23.89/17.22) |  | 4.2    | 4.3    | 4.9       | 5.4      | 5.4       | 5.2       | 5.4    | 5.7        | 6.7        | 7.0        |
|        | 80/67 (26.67/19.44) |  | 4.4    | 4.5    | 5.3       | 5.9      | 5.8       | 5.6       | 5.7    | 6.0        | 7.0        | 7.4        |
|        | 90/73 (32.22/22.78) |  | 4.8    | 4.9    | 6.0       | 6.6      | 6.4       | 5.9       | 6.3    | 6.6        | 7.8        | 8.1        |
| PSI    | 70/59 (21.11/15)    |  | 58     | 59     | 67        | 73       | 74        | 71        | 74     | 78         | 91         | 96         |
|        | 75/63 (23.89/17.22) |  | 61     | 62     | 71        | 78       | 78        | 75        | 78     | 83         | 97         | 102        |
|        | 80/67 (26.67/19.44) |  | 64     | 65     | 77        | 86       | 84        | 81        | 83     | 87         | 102        | 107        |
|        | 90/73 (32.22/22.78) |  | 70     | 71     | 87        | 96       | 93        | 86        | 91     | 96         | 113        | 117        |
| MPa    | 70/59 (21.11/15)    |  | 0.40   | 0.41   | 0.46      | 0.50     | 0.51      | 0.49      | 0.51   | 0.54       | 0.63       | 0.66       |
|        | 75/63 (23.89/17.22) |  | 0.42   | 0.43   | 0.49      | 0.54     | 0.54      | 0.52      | 0.54   | 0.57       | 0.67       | 0.70       |
|        | 80/67 (26.67/19.44) |  | 0.44   | 0.45   | 0.53      | 0.59     | 0.58      | 0.56      | 0.57   | 0.60       | 0.70       | 0.74       |
|        | 90/73 (32.22/22.78) |  | 0.48   | 0.49   | 0.60      | 0.66     | 0.64      | 0.59      | 0.63   | 0.66       | 0.78       | 0.81       |

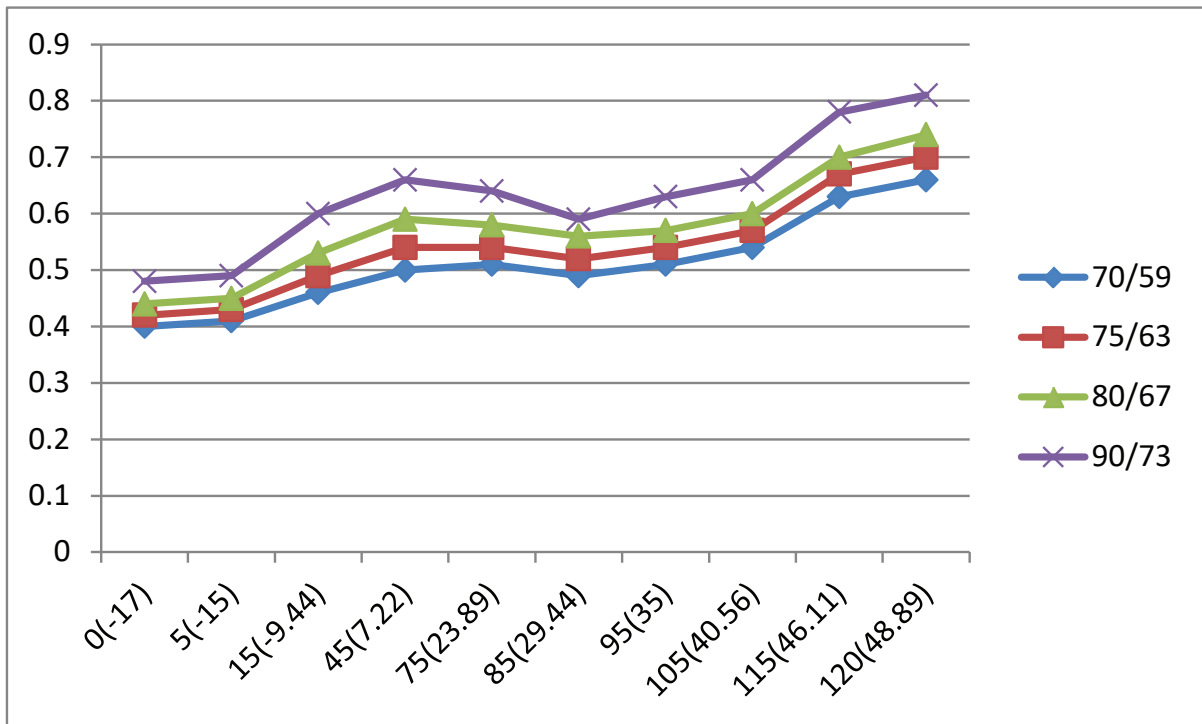


### Heating chart(R22):

| °F(°C) | ODU(DB/WB) | 57/53<br>(13.89/11.67) | 47/43<br>(8.33/6.11) | 37/33<br>(2.78/0.56) | 27/23<br>(-2.78/-5) | 17/13 (-8.33/<br>-10.56) | 0/-2<br>(-17/-19) | -17/-18<br>(-27/-28) |
|--------|------------|------------------------|----------------------|----------------------|---------------------|--------------------------|-------------------|----------------------|
|        | IDU(DB)    |                        |                      |                      |                     |                          |                   |                      |
| BAR    | 55(12.78)  | 18.9                   | 17.8                 | 15.8                 | 14.3                | 13.0                     | 11.6              | 10.3                 |
|        | 65(18.33)  | 20.3                   | 18.8                 | 16.6                 | 15.9                | 14.6                     | 12.8              | 11.9                 |
|        | 75(23.89)  | 21.1                   | 19.7                 | 17.3                 | 16.4                | 15.6                     | 13.4              | 12.5                 |
| PSI    | 55(12.78)  | 274                    | 258                  | 229                  | 207                 | 189                      | 168               | 149                  |
|        | 65(18.33)  | 294                    | 273                  | 241                  | 231                 | 212                      | 186               | 172.6                |
|        | 75(23.89)  | 306                    | 286                  | 251                  | 238                 | 226                      | 194               | 181                  |
| MPa    | 55(12.78)  | 1.89                   | 1.78                 | 1.58                 | 1.43                | 1.30                     | 1.16              | 1.03                 |
|        | 65(18.33)  | 2.03                   | 1.88                 | 1.66                 | 1.59                | 1.46                     | 1.28              | 1.19                 |
|        | 75(23.89)  | 2.11                   | 1.97                 | 1.73                 | 1.64                | 1.56                     | 1.34              | 1.25                 |

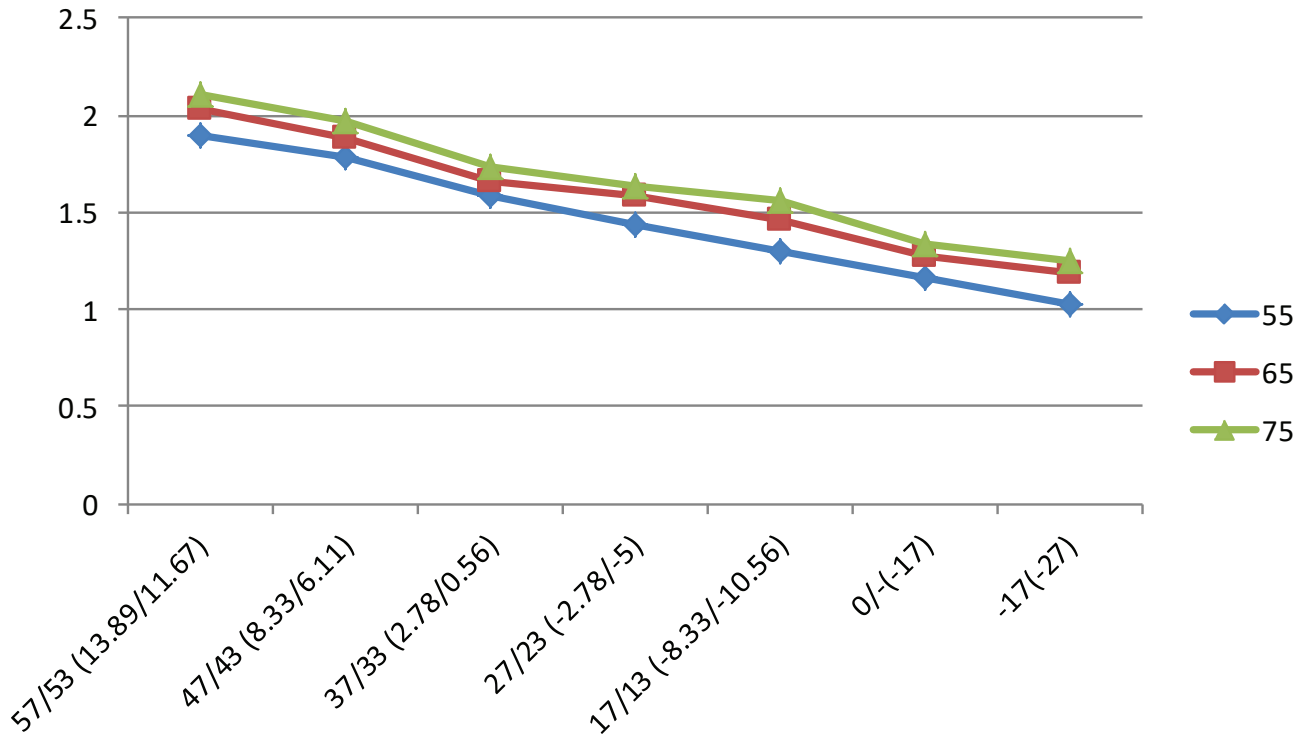


### Cooling chart(R32):

| °F(°C) | ODU(DB)             |  | 0(-17) | 5(-15) | 15(-9.44) | 45(7.22) | 75(23.89) | 85(29.44) | 95(35) | 105(40.56) | 115(46.11) | 120(48.89) |
|--------|---------------------|--|--------|--------|-----------|----------|-----------|-----------|--------|------------|------------|------------|
|        | IDU(DB/WB)          |  |        |        |           |          |           |           |        |            |            |            |
| BAR    | 70/59 (21.11/15)    |  | 6.5    | 6.6    | 7.4       | 8.2      | 8.4       | 8.0       | 8.3    | 8.8        | 10.3       | 10.8       |
|        | 75/63 (23.89/17.22) |  | 6.8    | 6.9    | 8.1       | 8.8      | 8.8       | 8.5       | 8.9    | 9.3        | 10.9       | 11.4       |
|        | 80/67 (26.67/19.44) |  | 7.2    | 7.3    | 8.7       | 9.7      | 9.5       | 9.1       | 9.3    | 9.8        | 11.4       | 12.1       |
|        | 90/73 (32.22/22.78) |  | 7.9    | 8.0    | 9.8       | 10.7     | 10.5      | 9.7       | 10.2   | 10.8       | 12.6       | 13.3       |
| PSI    | 70/59 (21.11/15)    |  | 95     | 96     | 108       | 118      | 121       | 115       | 119    | 128        | 150        | 157        |
|        | 75/63 (23.89/17.22) |  | 99     | 101    | 117       | 128      | 126       | 122       | 129    | 135        | 158        | 165        |
|        | 80/67 (26.67/19.44) |  | 105    | 106    | 125       | 141      | 138       | 132       | 135    | 143        | 165        | 176        |
|        | 90/73 (32.22/22.78) |  | 114    | 115    | 142       | 155      | 152       | 141       | 148    | 157        | 184        | 193        |
| MPa    | 70/59 (21.11/15)    |  | 0.65   | 0.66   | 0.74      | 0.82     | 0.84      | 0.80      | 0.83   | 0.88       | 1.03       | 1.08       |
|        | 75/63 (23.89/17.22) |  | 0.68   | 0.69   | 0.81      | 0.88     | 0.88      | 0.85      | 0.89   | 0.93       | 1.09       | 1.14       |
|        | 80/67 (26.67/19.44) |  | 0.72   | 0.73   | 0.87      | 0.97     | 0.95      | 0.91      | 0.93   | 0.98       | 1.14       | 1.21       |
|        | 90/73 (32.22/22.78) |  | 0.79   | 0.80   | 0.98      | 1.07     | 1.05      | 0.97      | 1.02   | 1.08       | 1.26       | 1.33       |

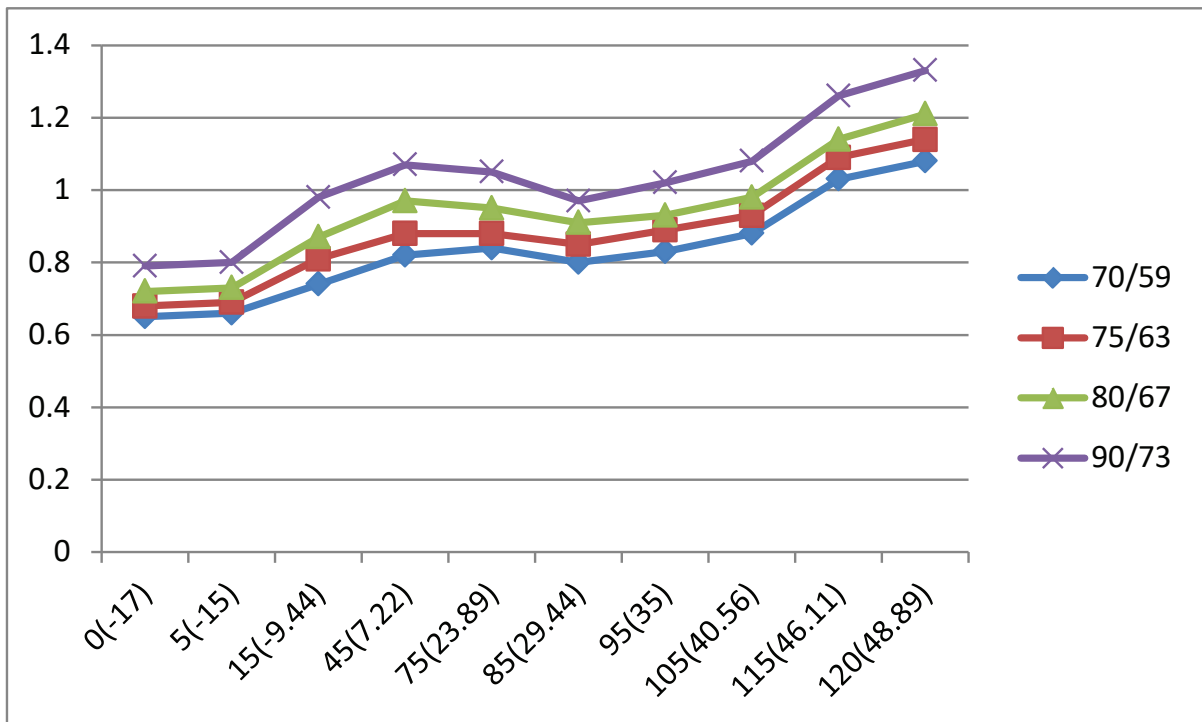

### Heating chart(R32):

| °F(°C) | ODU(DB/WB) | 57/53<br>(13.89/11.67) | 47/43<br>(8.33/6.11) | 37/33<br>(2.78/0.56) | 27/23<br>(-2.78/-5) | 17/13 (-8.33/<br>-10.56) | 0/-2<br>(-17/-19) | -17/-18<br>(-27/-28) |
|--------|------------|------------------------|----------------------|----------------------|---------------------|--------------------------|-------------------|----------------------|
|        | IDU(DB)    |                        |                      |                      |                     |                          |                   |                      |
| BAR    | 55(12.78)  | 30.9                   | 29.1                 | 25.8                 | 23.3                | 21.2                     | 18.9              | 16.8                 |
|        | 65(18.33)  | 33.2                   | 30.6                 | 27.1                 | 25.9                | 23.8                     | 20.9              | 19.4                 |
|        | 75(23.89)  | 34.5                   | 32.1                 | 28.4                 | 26.8                | 25.4                     | 21.9              | 20.4                 |
| PSI    | 55(12.78)  | 448                    | 421                  | 374                  | 337                 | 308                      | 273               | 244                  |
|        | 65(18.33)  | 480                    | 444                  | 394                  | 375                 | 346                      | 303               | 282                  |
|        | 75(23.89)  | 499                    | 466                  | 411                  | 389                 | 369                      | 318               | 296                  |
| MPa    | 55(12.78)  | 3.09                   | 2.91                 | 2.58                 | 2.33                | 2.12                     | 1.89              | 1.68                 |
|        | 65(18.33)  | 3.32                   | 3.06                 | 2.71                 | 2.59                | 2.38                     | 2.09              | 1.94                 |
|        | 75(23.89)  | 3.45                   | 3.21                 | 2.84                 | 2.68                | 2.54                     | 2.19              | 2.04                 |

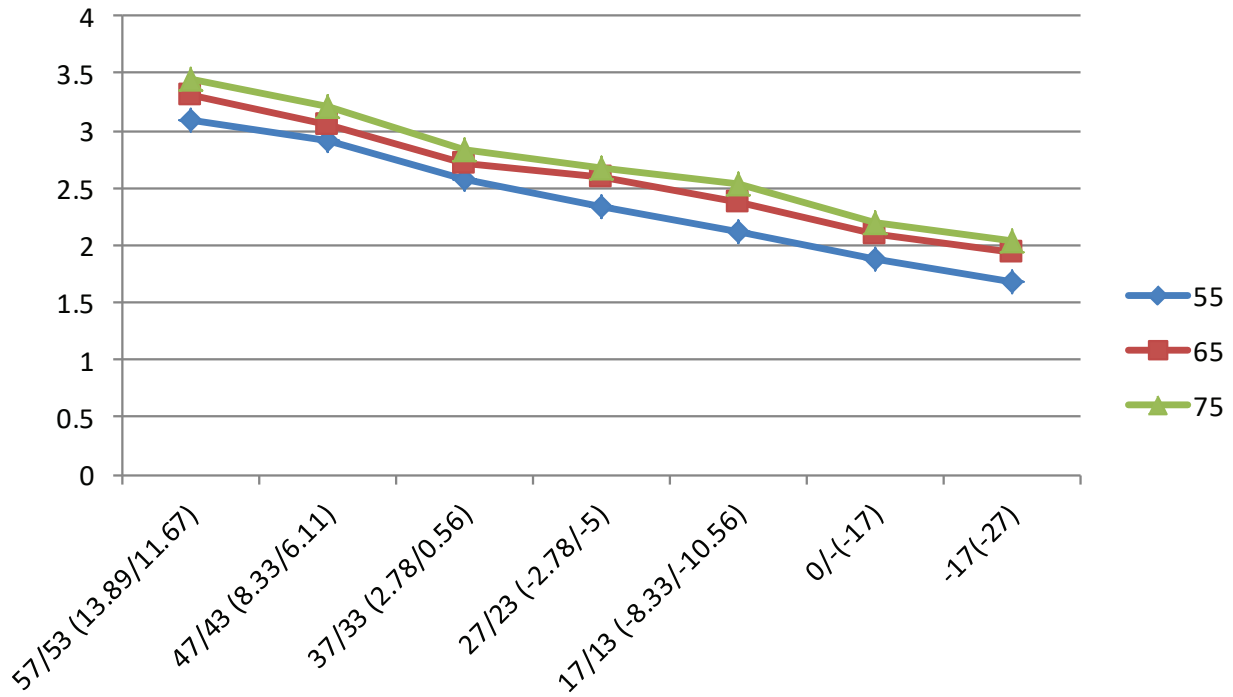

## System Pressure Table-R22

| Pressure |      |        | Temperature |         | Pressure |      |        | Temperature |         |
|----------|------|--------|-------------|---------|----------|------|--------|-------------|---------|
| Kpa      | bar  | PSI    | °C          | °F      | Kpa      | bar  | PSI    | °C          | °F      |
| 100      | 1    | 14.5   | -41.091     | -41.964 | 1600     | 16   | 232    | 41.748      | 107.146 |
| 150      | 1.5  | 21.75  | -32.077     | -25.739 | 1650     | 16.5 | 239.25 | 43.029      | 109.452 |
| 200      | 2    | 29     | -25.177     | -13.319 | 1700     | 17   | 246.5  | 44.281      | 111.706 |
| 250      | 2.5  | 36.25  | -19.508     | -3.114  | 1750     | 17.5 | 253.75 | 45.506      | 113.911 |
| 300      | 3    | 43.5   | -14.654     | 5.623   | 1800     | 18   | 261    | 46.706      | 116.071 |
| 350      | 3.5  | 50.75  | -10.384     | 13.309  | 1850     | 18.5 | 268.25 | 47.882      | 118.188 |
| 400      | 4    | 58     | -6.556      | 20.199  | 1900     | 19   | 275.5  | 49.034      | 120.261 |
| 450      | 4.5  | 65.25  | -3.075      | 26.464  | 1950     | 19.5 | 282.75 | 50.164      | 122.295 |
| 500      | 5    | 72.5   | 0.124       | 32.223  | 2000     | 20   | 290    | 51.273      | 124.291 |
| 550      | 5.5  | 79.75  | 3.091       | 37.563  | 2050     | 20.5 | 297.25 | 52.361      | 126.250 |
| 600      | 6    | 87     | 5.861       | 42.550  | 2100     | 21   | 304.5  | 53.43       | 128.174 |
| 650      | 6.5  | 94.25  | 8.464       | 47.234  | 2150     | 21.5 | 311.75 | 54.48       | 130.064 |
| 700      | 7    | 101.5  | 10.92       | 51.656  | 2200     | 22   | 319    | 55.512      | 131.922 |
| 750      | 7.5  | 108.75 | 13.249      | 55.848  | 2250     | 22.5 | 326.25 | 56.527      | 133.749 |
| 800      | 8    | 116    | 15.465      | 59.837  | 2300     | 23   | 333.5  | 57.526      | 135.547 |
| 850      | 8.5  | 123.25 | 17.58       | 63.644  | 2350     | 23.5 | 340.75 | 58.508      | 137.314 |
| 900      | 9    | 130.5  | 19.604      | 67.287  | 2400     | 24   | 348    | 59.475      | 139.055 |
| 950      | 9.5  | 137.75 | 21.547      | 70.785  | 2450     | 24.5 | 355.25 | 60.427      | 140.769 |
| 1000     | 10   | 145    | 23.415      | 74.147  | 2500     | 25   | 362.5  | 61.364      | 142.455 |
| 1050     | 10.5 | 152.25 | 25.216      | 77.389  | 2550     | 25.5 | 369.75 | 62.288      | 144.118 |
| 1100     | 11   | 159.5  | 26.953      | 80.515  | 2600     | 26   | 377    | 63.198      | 145.756 |
| 1150     | 11.5 | 166.75 | 28.634      | 83.541  | 2650     | 26.5 | 384.25 | 64.095      | 147.371 |
| 1200     | 12   | 174    | 30.261      | 86.470  | 2700     | 27   | 391.5  | 64.98       | 148.964 |
| 1250     | 12.5 | 181.25 | 31.839      | 89.310  | 2750     | 27.5 | 398.75 | 65.852      | 150.534 |
| 1300     | 13   | 188.5  | 33.371      | 92.068  | 2800     | 28   | 406    | 66.712      | 152.082 |
| 1350     | 13.5 | 195.75 | 34.86       | 94.748  | 2850     | 28.5 | 413.25 | 67.561      | 153.610 |
| 1400     | 14   | 203    | 36.308      | 97.354  | 2900     | 29   | 420.5  | 68.399      | 155.118 |
| 1450     | 14.5 | 210.25 | 37.719      | 99.894  | 2950     | 29.5 | 427.75 | 69.226      | 156.607 |
| 1500     | 15   | 217.5  | 39.095      | 102.371 | 3000     | 30   | 435    | 70.042      | 158.076 |
| 1550     | 15.5 | 224.75 | 40.437      | 104.787 |          |      |        |             |         |

## System Pressure Table-R410A

| Pressure |      |        | Temperature |         | Pressure |      |        | Temperature |         |
|----------|------|--------|-------------|---------|----------|------|--------|-------------|---------|
| Kpa      | bar  | PSI    | °C          | °F      | Kpa      | bar  | PSI    | °C          | °F      |
| 100      | 1    | 14.5   | -51.623     | -60.921 | 2350     | 23.5 | 340.75 | 38.817      | 101.871 |
| 150      | 1.5  | 21.75  | -43.327     | -45.989 | 2400     | 24   | 348    | 39.68       | 103.424 |
| 200      | 2    | 29     | -36.992     | -34.586 | 2450     | 24.5 | 355.25 | 40.531      | 104.956 |
| 250      | 2.5  | 36.25  | -31.795     | -25.231 | 2500     | 25   | 362.5  | 41.368      | 106.462 |
| 300      | 3    | 43.5   | -27.351     | -17.232 | 2550     | 25.5 | 369.75 | 42.192      | 107.946 |
| 350      | 3.5  | 50.75  | -23.448     | -10.206 | 2600     | 26   | 377    | 43.004      | 109.407 |
| 400      | 4    | 58     | -19.953     | -3.915  | 2650     | 26.5 | 384.25 | 43.804      | 110.847 |
| 450      | 4.5  | 65.25  | -16.779     | 1.798   | 2700     | 27   | 391.5  | 44.592      | 112.266 |
| 500      | 5    | 72.5   | -13.863     | 7.047   | 2750     | 27.5 | 398.75 | 45.37       | 113.666 |
| 550      | 5.5  | 79.75  | -11.162     | 11.908  | 2800     | 28   | 406    | 46.136      | 115.045 |
| 600      | 6    | 87     | -8.643      | 16.444  | 2850     | 28.5 | 413.25 | 46.892      | 116.406 |
| 650      | 6.5  | 94.25  | -6.277      | 20.701  | 2900     | 29   | 420.5  | 47.638      | 117.748 |
| 700      | 7    | 101.5  | -4.046      | 24.716  | 2950     | 29.5 | 427.75 | 48.374      | 119.073 |
| 750      | 7.5  | 108.75 | -1.933      | 28.521  | 3000     | 30   | 435    | 49.101      | 120.382 |
| 800      | 8    | 116    | 0.076       | 32.137  | 3050     | 30.5 | 442.25 | 49.818      | 121.672 |
| 850      | 8.5  | 123.25 | 1.993       | 35.587  | 3100     | 31   | 449.5  | 50.525      | 122.945 |
| 900      | 9    | 130.5  | 3.826       | 38.888  | 3150     | 31.5 | 456.75 | 51.224      | 124.203 |
| 950      | 9.5  | 137.75 | 5.584       | 42.052  | 3200     | 32   | 464    | 51.914      | 125.445 |
| 1000     | 10   | 145    | 7.274       | 45.093  | 3250     | 32.5 | 471.25 | 52.596      | 126.673 |
| 1050     | 10.5 | 152.25 | 8.901       | 48.022  | 3300     | 33   | 478.5  | 53.27       | 127.886 |
| 1100     | 11   | 159.5  | 10.471      | 50.848  | 3350     | 33.5 | 485.75 | 53.935      | 129.083 |
| 1150     | 11.5 | 166.75 | 11.988      | 53.578  | 3400     | 34   | 493    | 54.593      | 130.267 |
| 1200     | 12   | 174    | 13.457      | 56.223  | 3450     | 34.5 | 500.25 | 55.243      | 131.437 |
| 1250     | 12.5 | 181.25 | 14.879      | 58.782  | 3500     | 35   | 507.5  | 55.885      | 132.593 |
| 1300     | 13   | 188.5  | 16.26       | 61.268  | 3550     | 35.5 | 514.75 | 56.52       | 133.736 |
| 1350     | 13.5 | 195.75 | 17.602      | 63.684  | 3600     | 36   | 522    | 57.148      | 134.866 |
| 1400     | 14   | 203    | 18.906      | 66.031  | 3650     | 36.5 | 529.25 | 57.769      | 135.984 |
| 1450     | 14.5 | 210.25 | 20.176      | 68.317  | 3700     | 37   | 536.5  | 58.383      | 137.089 |
| 1500     | 15   | 217.5  | 21.414      | 70.545  | 3750     | 37.5 | 543.75 | 58.99       | 138.182 |
| 1550     | 15.5 | 224.75 | 22.621      | 72.718  | 3800     | 38   | 551    | 59.591      | 139.264 |
| 1600     | 16   | 232    | 23.799      | 74.838  | 3850     | 38.5 | 558.25 | 60.185      | 140.333 |
| 1650     | 16.5 | 239.25 | 24.949      | 76.908  | 3900     | 39   | 565.5  | 60.773      | 141.391 |
| 1700     | 17   | 246.5  | 26.074      | 78.933  | 3950     | 39.5 | 572.75 | 61.355      | 142.439 |
| 1750     | 17.5 | 253.75 | 27.174      | 80.913  | 4000     | 40   | 580    | 61.93       | 143.474 |
| 1800     | 18   | 261    | 28.251      | 82.852  | 4050     | 40.5 | 587.25 | 62.499      | 144.498 |
| 1850     | 18.5 | 268.25 | 29.305      | 84.749  | 4100     | 41   | 594.5  | 63.063      | 145.513 |
| 1900     | 19   | 275.5  | 30.338      | 86.608  | 4150     | 41.5 | 601.75 | 63.62       | 146.516 |
| 1950     | 19.5 | 282.75 | 31.351      | 88.432  | 4200     | 42   | 609    | 64.172      | 147.510 |
| 2000     | 20   | 290    | 32.344      | 90.219  | 4250     | 42.5 | 616.25 | 64.719      | 148.494 |
| 2050     | 20.5 | 297.25 | 33.319      | 91.974  | 4300     | 43   | 623.5  | 65.259      | 149.466 |
| 2100     | 21   | 304.5  | 34.276      | 93.697  | 4350     | 43.5 | 630.75 | 65.795      | 150.431 |
| 2150     | 21.5 | 311.75 | 35.215      | 95.387  | 4400     | 44   | 638    | 66.324      | 151.383 |
| 2200     | 22   | 319    | 36.139      | 97.050  | 4450     | 44.5 | 645.25 | 66.849      | 152.328 |
| 2250     | 22.5 | 326.25 | 37.047      | 98.685  | 4500     | 45   | 652.5  | 67.368      | 153.262 |
| 2300     | 23   | 333.5  | 37.939      | 100.290 |          |      |        |             |         |

## System Pressure Table-R32

| Pressure |      |        | Temperature |         | Pressure |      |        | Temperature |         |
|----------|------|--------|-------------|---------|----------|------|--------|-------------|---------|
| Kpa      | bar  | PSI    | °C          | °F      | Kpa      | bar  | PSI    | °C          | °F      |
| 100      | 1    | 14.5   | -51.909     | -61.436 | 1850     | 18.5 | 268.25 | 28.425      | 83.165  |
| 150      | 1.5  | 21.75  | -43.635     | -46.543 | 1900     | 19   | 275.5  | 29.447      | 85.005  |
| 200      | 2    | 29     | -37.323     | -35.181 | 1950     | 19.5 | 282.75 | 30.448      | 86.806  |
| 250      | 2.5  | 36.25  | -32.15      | -25.87  | 2000     | 20   | 290    | 31.431      | 88.576  |
| 300      | 3    | 43.5   | -27.731     | -17.916 | 2050     | 20.5 | 297.25 | 32.395      | 90.311  |
| 350      | 3.5  | 50.75  | -23.85      | -10.93  | 2100     | 21   | 304.5  | 33.341      | 92.014  |
| 400      | 4    | 58     | -20.378     | -4.680  | 2150     | 21.5 | 311.75 | 34.271      | 93.688  |
| 450      | 4.5  | 65.25  | -17.225     | 0.995   | 2200     | 22   | 319    | 35.184      | 95.331  |
| 500      | 5    | 72.5   | -14.331     | 6.204   | 2250     | 22.5 | 326.25 | 36.082      | 96.948  |
| 550      | 5.5  | 79.75  | -11.65      | 11.03   | 2300     | 23   | 333.5  | 36.965      | 98.537  |
| 600      | 6    | 87     | -9.150      | 15.529  | 2350     | 23.5 | 340.75 | 37.834      | 100.101 |
| 650      | 6.5  | 94.25  | -6.805      | 19.752  | 2400     | 24   | 348    | 38.688      | 101.638 |
| 700      | 7    | 101.5  | -4.593      | 23.734  | 2450     | 24.5 | 355.25 | 39.529      | 103.152 |
| 750      | 7.5  | 108.75 | -2.498      | 27.505  | 2500     | 25   | 362.5  | 40.358      | 104.644 |
| 800      | 8    | 116    | -0.506      | 31.089  | 2550     | 25.5 | 369.75 | 41.173      | 106.111 |
| 850      | 8.5  | 123.25 | 1.393       | 34.507  | 2600     | 26   | 377    | 41.977      | 107.559 |
| 900      | 9    | 130.5  | 3.209       | 37.777  | 2650     | 26.5 | 384.25 | 42.769      | 108.984 |
| 950      | 9.5  | 137.75 | 4.951       | 40.911  | 2700     | 27   | 391.5  | 43.55       | 110.39  |
| 1000     | 10   | 145    | 6.624       | 43.923  | 2750     | 27.5 | 398.75 | 44.32       | 111.776 |
| 1050     | 10.5 | 152.25 | 8.235       | 46.823  | 2800     | 28   | 406    | 45.079      | 113.142 |
| 1100     | 11   | 159.5  | 9.790       | 49.621  | 2850     | 28.5 | 413.25 | 45.828      | 114.490 |
| 1150     | 11.5 | 166.75 | 11.291      | 52.324  | 2900     | 29   | 420.5  | 46.567      | 115.821 |
| 1200     | 12   | 174    | 12.745      | 54.941  | 2950     | 29.5 | 427.75 | 47.296      | 117.133 |
| 1250     | 12.5 | 181.25 | 14.153      | 57.475  | 3000     | 30   | 435    | 48.015      | 118.427 |
| 1300     | 13   | 188.5  | 15.52       | 59.936  | 3050     | 30.5 | 442.25 | 48.726      | 119.707 |
| 1350     | 13.5 | 195.75 | 16.847      | 62.325  | 3100     | 31   | 449.5  | 49.428      | 120.970 |
| 1400     | 14   | 203    | 18.138      | 64.648  | 3150     | 31.5 | 456.75 | 50.121      | 122.218 |
| 1450     | 14.5 | 210.25 | 19.395      | 66.911  | 3200     | 32   | 464    | 50.806      | 123.451 |
| 1500     | 15   | 217.5  | 20.619      | 69.114  | 3250     | 32.5 | 471.25 | 51.482      | 124.668 |
| 1550     | 15.5 | 224.75 | 21.813      | 71.263  | 3300     | 33   | 478.5  | 52.15       | 125.87  |
| 1600     | 16   | 232    | 22.978      | 73.360  | 3350     | 33.5 | 485.75 | 52.811      | 127.060 |
| 1650     | 16.5 | 239.25 | 24.116      | 75.409  | 3400     | 34   | 493    | 53.464      | 128.235 |
| 1700     | 17   | 246.5  | 25.229      | 77.412  | 3450     | 34.5 | 500.25 | 54.11       | 129.398 |
| 1750     | 17.5 | 253.75 | 26.317      | 79.371  | 3500     | 35   | 507.5  | 54.748      | 130.546 |
| 1800     | 18   | 261    | 27.382      | 81.288  |          |      |        |             |         |



**MIRCOOL<sup>®</sup>**

COMFORT MADE SIMPLE

**4th Generation  
DIY<sup>®</sup> Multi-Zone**